

取扱説明書

保証書付き

裏表紙が保証書になっています。

HITACHI
Inspire the Next



家庭用

日立交流式保湿サポート器

シー エム エヌ

型式 CM-N3000/CM-N03

シー エム エヌ

AC100-240V専用

お買い上げありがとうございます。
この「取扱説明書」をよくお読み
になり正しくご使用ください。
お読みになった後は大切に保存
してください。



特 長

- 温熱機能つき
肌をあたためながら気持ちよく
クレンジングと保湿ケアができます。
- クール機能つき
肌のクールダウンと毛穴のひきし
めができます。
- お知らせタイマー機能つき
約45秒ごとに「ピッ」というブザー
音でお手入れ時間の目安をお知らせ
します。
- オートオフ機能つき
電源を入れて3分間放置または
各モードが終了すると自動的に
電源が切れます。
- 温熱ヘッドと背面プレートには
チタン材を採用
- ふだんお使いの化粧水・乳液
などが使えます。
- 収納に便利なスタンドつき。



4902530066807

目 次

● 相性診断	3
● ご使用になる前に	4~5
● 各部の名称と働き	6
● 安全上のご注意	7~10
● ご使用例	11~12
● 使いかた	13~24
ステップ1 溫クレンジング	13
ステップ2 溫モイストアップ	15
ステップ3 溫マスク	20
ステップ4 クール	22
● 海外でのご使用について	25
● お手入れ	26
● 保存のしかた	26
● 「故障かな」と思ったときは	27~28
● トラブルQ&A	29~30
● お客様ご相談窓口	31
● 保証とアフターサービス	32
● 仕様	33
● 製品を廃棄するときのお願い	33

相性診断

肌のトラブルを防止するため、事前に実施してください。

1 初めてお使いになる化粧品は、パッチテスト(皮膚試験)で肌のチェックをします。

(1) 腕の内側を石けんで洗い、タオルなどでふきとります。

(2) 洗ったところに化粧品を塗り、48時間放置します。

- 10円硬貨大に薄く塗り、自然乾燥させます。
- パッチテストをした部分は、水でぬらしたりこすったりしないでください。



注意

塗布部に発疹・発赤・かゆみ・刺激などの異常が生じた場合は、直ちにテストを中止して洗い流す。

(3) 異常のないことを確認します。

48時間経過後に異常がなければ使用できます。

(4) パッチテストの結果、異常があった場合は本器でこの化粧品を使用しないでください。

2 ふだんお使いの化粧品も含め、本器との相性テストで肌のチェックをします。

(1) 腕の内側を石けんで洗い、タオルなどでふきとります。

(2) 15ページの使いかた「ステップ2 湿モイストアップ」に従い、洗ったところに約10秒間当てます。

(3) 上記パッチテストの要領で、48時間経過後異常なければ使用できます。

ご使用になる前に

△注意

肌に傷や炎症がある場合は絶対に使用しない。
(肌のトラブルや傷みの原因)

貴金属やコンタクトレンズははずす。
(肌のトラブル、体調不良の原因)

1 各モードと化粧品

モード	コットンと化粧品
温クレンジング (毛穴に残った微細な汚れ落とし)	新しいコットンにふだんお使いの化粧水を含ませて使用します。
温モイストアップ (保湿成分を肌に浸透させ保湿ケア)	新しいコットンにふだんお使いの化粧水を含ませて使用します。ゲル・ジェルタイプ、またはとろみのある化粧水の場合はコットンを使わずそのまま化粧品をお肌につけて使用することもできます。
温マスク (乳液やシートマスクの効果をサポート)	ふだんお使いの乳液やシートマスクなどを肌につけて使用します。コットンは使用しません。
クール (冷却効果で肌の毛穴ひきしめ)	冷却ヘッド部を直接肌にあてて使用します。 コットンと化粧水は使用しません。

2 洗顔でメイクや汚れを洗い流して、清潔にします。

- メイクはクレンジング剤で落としてください。

3 本体にコットンを取りつけます。


せまい方が上です。

- (1)温熱ヘッドの保護シールをはがします。

- 保護シールをはがさないと動作しません。

- (2)コットンをかぶせ付属のリングで固定します。

- コットンは市販の化粧用をご使用ください。ただし、小さいコットンや厚いコットンは取りつけできない場合があります。
- リングは方向性があります。内側の周囲が広い方をヘッド側にして真上から取りつけてください。

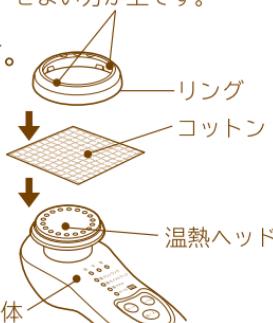

逆向きに取りつけないでください。無理に押し込みますとはずれなくなりますので注意してください。

4 リングのはずしかた。


- リングの下部を押したまま
まっすぐ上げてはずします。



5 ご使用に際しては肌を傷めないために、次の事項をお守りください。

- (1) 本器の基本モードは1日1回8分間です。

(1~3の各ステップとも1日3分を超えるご使用、ステップ4は1日1回を超えるご使用は避けてください。)

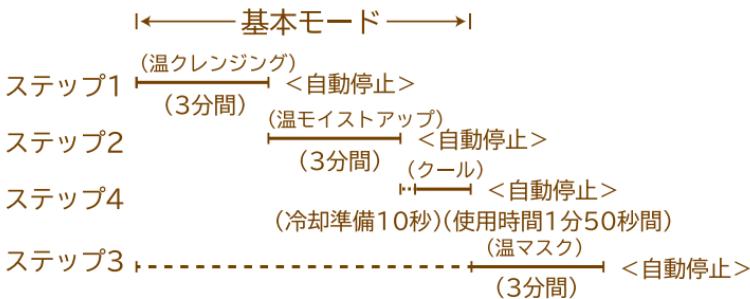


- 「温マスク」を含めた1日11分を超える使用は避けてください。
 - 「温マスク」は乳液の場合は1日1回、シートマスクの場合は1週間に1~2回のご使用をおすすめします。

- (2) メイクを落とした素肌に使用してください。
 - (3) 同一部位の使用は10秒を超えないでください。
 - (4) 肌の調子に合わせレベル切替ボタンを押して切り替えてください。

- 「弱」、「中」、「強」は、好みにより使用できますが、肌に「ピリピリ感」を感じる場合は「弱」でご使用ください。
 - 肌に異常を感じる場合は、使用を中止して専門医にご相談ください。

各部の名称と働き

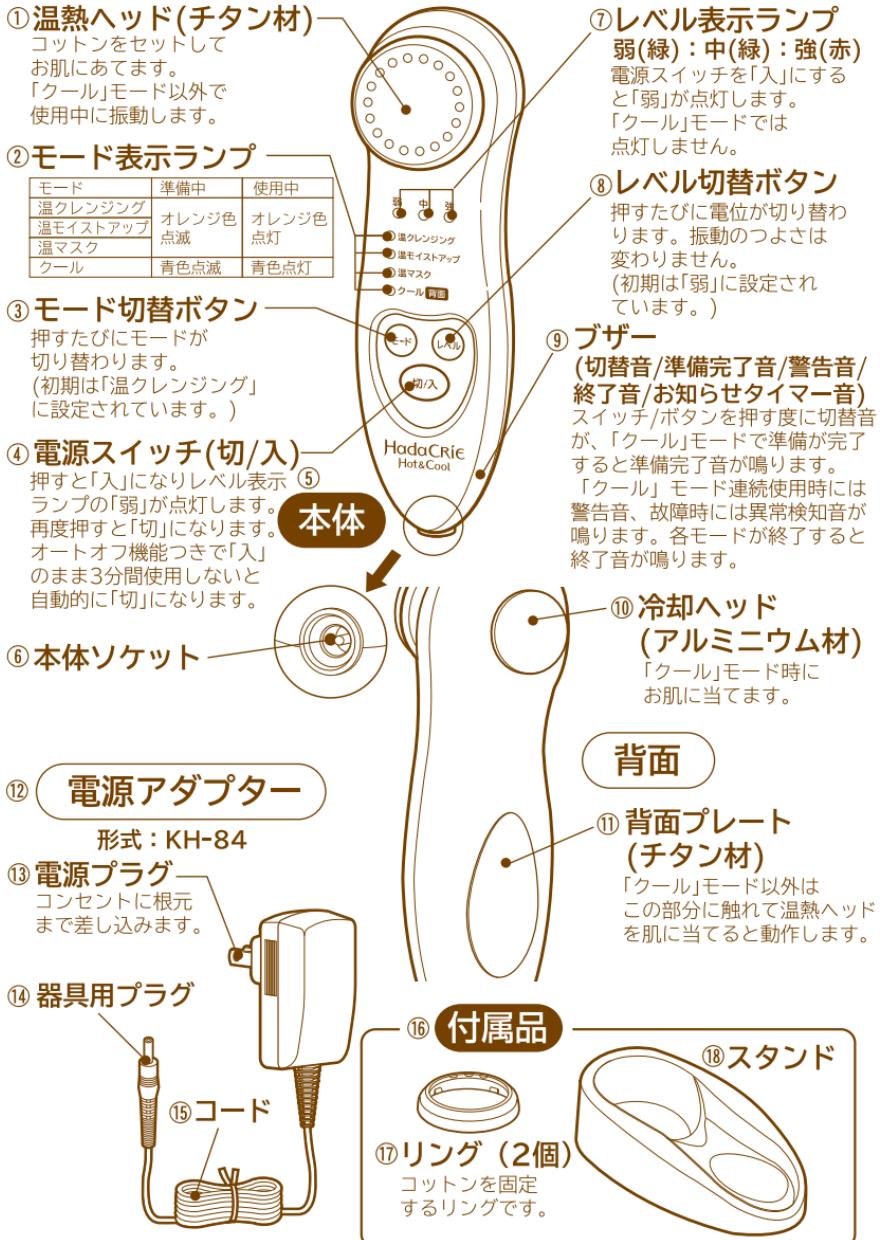

安全上のご注意

必ずお守りください。

つづく

- ここに示した注意事項は、製品を安全に正しくお使いいただき、あなたや周囲の方への危害や損害を未然に防止するためのものです。
- 注意事項は次のように区分しています。
いずれも安全に関する重要な内容ですので、必ず守ってください。

 危険	取り扱いを誤った場合、使用者が死亡または重傷を負うことがあり、かつその切迫の度合いが高い危害の程度。
 警告	取り扱いを誤った場合、使用者が死亡または重傷を負うことが想定される危害の程度。
 注意	取り扱いを誤った場合、使用者が軽傷を負うことが想定されるか、または物的損害(家屋・家財など)の発生が想定される危害・損害の程度。

＜絵表示の例＞

	記号は、「禁止」(しないでください)を示しています。 ● 「分解禁止」   ● 「水ぬれ禁止」  
	記号は、「強制」(必ずしてください)を示しています。 ● 「一般的な行為」  「電源プラグをコンセントから抜く」

 危険
 禁止 下記のような医用電気機器をお使いの方は絶対に使用しない。(医用電気機器の誤動作をまねく原因) ● パースメーラーなどの体内埋込み型医用電気機器。 心電計等の装着形の医用電気機器。

警告

 禁止	<p>取扱説明書に記載されている以外の使い方はしない。 (事故やトラブル、故障の原因)</p> <p>顔と首以外に使用しない。[パッチテスト(皮膚試験)の腕は除く] (事故やトラブルの原因)</p> <p>次のような方は使用を避ける。(事故やトラブルの原因)</p> <ul style="list-style-type: none">●心臓に障害のある人●急性(疼痛性)疾患の人●有熱性疾患の人●血圧異常の人●感染症疾患のある人●結核症疾患の人●悪性腫瘍のある人●顔面神経痛の人●妊娠中の人は●生理中の場合●アトピー性皮フ炎の人●アレルギー体質の人●特に肌が敏感な人●血友病疾患の人●歯の治療中の人は●ステロイド系ホルモン剤の長期使用や肝機能障害で毛細血管拡張を起こしている人●飲酒している場合や薬を服用中の場合、疲労が激しい場合
	<p>下記の部位には使用しない。(事故やトラブルの原因)</p> <ul style="list-style-type: none">●整形手術をした部位●眼球および上まぶた●傷口●顔面黒皮症●口の中等粘膜の部位●唇●ニキビや吹出物で炎症を起こしている部位●痛覚、知覚障害を起こしている部位●皮フの下に金属、プラスチック、シリコン等を埋め込んである部位●力ユミやホテリ、物理的刺激などによる病的なシミのある部位●化粧品等で皮フ炎を起こしている部位
	<p>交流100-240V以外の電源は使用しない。 (火災や感電の原因)</p>
	<p>子どもには使わせない。また、幼児の手の届くところに置かない。(事故や故障の原因)</p>
	<p> 必ず守る</p> <p>使用中痛みや不調を感じたときや、使用後肌に異常を感じたときは、使用を中止して専門医に相談する。 (肌トラブルなどの原因)</p>
 電源プラグを抜く	<p>万一使用中異常が発生したら、電源アダプターの電源プラグをコンセントからすぐ抜く。 (事故や火災の原因)</p>

⚠ 警告

 禁止	<p>コードや電源プラグが傷んだり、コンセントの差し込みがゆるいときは使用しない。 (コードが損傷し、火災や感電の原因)</p>
	<p>コードを傷つけたり、無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、はさみ込んだり、加工したり、電源アダプターなどに巻きつけたりしない。(コードが損傷し、火災や感電の原因)</p>
	<p>引火性のもの(ガソリン・ベンジン・シンナーなど)の近くで使用しない。(爆発・火災の原因)</p>
 必ず守る	<p>本体に異音や異常が発生したら直ちに使用を停止し、電源アダプターと共に、販売店へ修理を依頼する。 (事故やトラブルの原因)</p>
	<p>使用時間や使用頻度は取扱説明書の指示を守る。 (事故やトラブルの原因)</p>
	<p>周囲温度10~40°Cで使用する。(クールモードは低温で使用すると、ヘッドが冷えすぎて肌を傷める原因)</p>
	<p>使いはじめの方は、肌の様子を見ながら使用する。 (肌のトラブル、体調不良の原因)</p>
	<p>規定時間以上の使用はしない。(肌トラブルの原因)</p>
 ぬれ手禁止	<p>ぬれた手で電源アダプターをコンセントに抜き差ししない。(故障やショートの原因)</p>
 水ぬれ禁止	<p>水洗いは絶対にしない。 また水につけたり水をかけたりしない。 (故障やショートの原因)</p>
 水場での使用禁止	<p>浴室など水のかかるところや湿気の多い所で使用したり放置しない。 (故障やショートの原因)</p>
 分解禁止	<p>改造はしない。また、修理技術者以外の人が修理をしない。(火災・感電・けが・故障の原因)</p>

安全上のご注意

必ずお守りください。

⚠ 注意



禁止

ご使用前に、温熱、冷却ヘッドにキズや変形がないか確認する。(肌を傷つける原因)

他の美容器具との併用は絶対にしない。
(事故やトラブルの原因)

肌に傷や炎症がある場合は絶対に使用しない。
(肌のトラブルや傷みの原因)

落としたり、強い衝撃を与えたりしない。
(けが・故障の原因)

車内など、高温な場所に放置しない。(故障の原因)

ベンジン、シンナー、アルコールなどでふいたり、殺虫剤をかけたりしない。(ひび割れ、感電、引火の可能性)

付属の電源アダプター以外は使用しない。また付属の電源アダプターを他の商品に使用しない。
(感電、引火の可能性)



必ず守る

イヤリングやネックレス等のアクセサリー、コンタクトレンズは、はずして使用する。(事故やトラブルの原因)

ひどい肌荒れや皮フ表面に凹凸がある場合またはうぶ毛やヒゲなどによって、まれに刺激を強く感じることがあります。その際には、その部位への使用を控える。(事故やトラブルの原因)

コットンやヘッドは肌の同一部位に留めず移動させる。
(肌のトラブルや体調不良の原因)

電源プラグや器具用プラグを抜くときは、コードを持たずに抜く。(断線・感電・ショート・発火の原因)

周囲に人がいるときは、不意の動きに注意して使用する。
(けがの原因)



電源プラグ
を抜く

使用しないときは、必ず電源アダプターをコンセントから抜く。
(劣化による感電や火災の原因)

モード切替ボタンを押してお好みのコースのモードを設定します。

お急ぎひきしめコース(所要時間 2分間)

• ステップ4 クール

肌の毛穴をひきしめたり、お化粧前の肌をクールダウンしたいときには「クール」だけでもご使用いただけます。

10秒間でクール準備し、1分50秒間で肌の毛穴をひきしめます。モード切替ボタンを押して「クール」を設定してください。

お急ぎうるおいコース(所要時間 3分間)

• ステップ2 温モイストアップ

時間がない朝や急なお出かけ時には「温モイストアップ」だけでもご使用いただけます。3分間で保湿をサポートします。

モード切替ボタンを押して「温モイストアップ」を設定してください。

ひきしめコース(所要時間 5分間)

• ステップ1 温クレンジング

• ステップ4 クール

毛穴に残った微細な汚れを落として肌の毛穴をひきしめたいときには「温クレンジング」をしてから「クール」にします。

肌の毛穴をすっきりとひきしめます。

「温クレンジング」終了後、モード切替ボタンを押して「クール」を設定してください。

うるおいコース(所要時間 6分間)

• ステップ1 温クレンジング

• ステップ2 温モイストアップ

お出かけ前や、時間に余裕のあるときは「温クレンジング」をしてから「温モイストアップ」します。すっきりした肌の保湿をサポートします。

ご使用例

デイリーコース(基本モード)(所要時間 8分間)

- ステップ1 温クレンジング
- ステップ2 温モイストアップ
- ステップ4 クール

毎日の定番コース。

「温クレンジング」をしてから「温モイストアップ」ですっきりした肌の保湿をサポートし、「クール」のひんやりとした冷却効果で肌の毛穴をひきしめます。

「温モイストアップ」終了後、モード切替ボタンを押して「クール」を設定してください。

おすすめフルコース(所要時間 11分間)

- ステップ1 温クレンジング
- ステップ2 温モイストアップ
- ステップ3 温マスク
- ステップ4 クール

1週間に1~2回は、全てのモードを使用して肌をケアします。

「温マスク」モードのきめ細やかな微振動と緩やかな電極の切り替えで肌を整えます。

「クール」のひんやりとした冷却効果で肌の毛穴をひきしめます。

- 電源は必ず交流100-240Vで、付属の電源アダプターを使用してください。(充電式ではありません。)
- 電源を入れた後、温熱ヘッドはゆっくりと温まります。

⚠ 警告

目や耳のまわりに使用しない。

(事故や体調不良を起こす原因)

使用中、肌や身体に異常を感じたらすぐに使用を中止して、専門医に相談する。

(事故や体調不良を起こす原因)

ステップ1 温クレンジング

洗顔だけでは落とせない毛穴に残った微細な汚れを落とすモードです。

1 洗顔後、本体に取りつけたコットンに化粧水を含ませます。

ふだんお使いの化粧水または角質除去効果のあるふき取り化粧水をお使いください。(乳液やゲル状のものは使用しないでください。)

- コットンの裏側まで、染み込む程度に含ませます。

一部の化粧水(鉱泉や水だけのものなど)では効果が現れにくい場合があります。

2 電源アダプターを本体とコンセントに接続して電源スイッチを押します。

- レベル表示ランプの「弱」が点灯して「温クレンジング」のモード表示ランプが点滅します。

別のモードが点滅している場合は、モード切替ボタンを押して「温クレンジング」に切り替えます。



3 レベル切替ボタンで電位の「つよさ」を選択します。

肌の調子に合わせてレベル切替ボタンで「つよさ」を切り替えます。

- レベル切替ボタンを押すたびに電位の「弱」・「中」・「強」が切り替わります。振動のつよさは変わりません。

使いかた

使い初めの方や違和感を感じた方は「弱」にして使用されることをおすすめします。

4 本体の背面プレートに手が触れるよう握ります。

- 必ず、背面プレートに手が触れるよう本体を握ってください。



5 コットンを肌にあてゆっくりと動かします。

- モード表示ランプが点灯に替わり振動します。
- 使用時間は3分以内です。

注意

背面プレートに触れてコットンを肌にあてないと振動しません。
(お肌検知機能)

温熱ヘッドが振動していないと機能していません。

振動しないまま3分間放置しますと、自動的に電源が「切」になります。
(オートオフ機能)


お知らせタイマー機能

約45秒ごとに「ピッ」というブザー音でお手入れ時間の目安をお知らせします。

[お手入れ順序の例]

図のように顔からデコルテを4つのゾーンにわけます。

①②両ほほ→③Tゾーン→④デコルテの順にヘッドを移動することで全体を効率よく均等にお手入れできます。

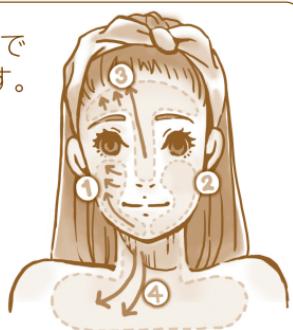

- 軽くあて、顔の中心部から外側へすべらせるようにゆっくり移動させます。

⚠ 注意

コットンは肌の同一部位に留めず移動させる。
(肌のトラブルや体調不良の原因)

- コットンの水分がなくなったり、すべりづらい場合は化粧水をつぎ足してください。

- 同一部位の使用は10秒以内にします。
- 使用中、微電流の刺激(ピリピリ感)を感じるときはレベル切替ボタンを押して「弱」にします。
それでも「ピリピリ感」を感じる場合は、化粧水をつぎ足してご使用ください。

6 3分経つと自動停止します。(オートオフ機能)

- 終了音(ピィピィ)でお知らせします。

7 使用後は、必ず電源アダプターをコンセントと本体から抜きます。



引き続き次のモードをご使用される場合は、電源アダプターを接続しておきます。

8 リングとコットンをはずします。

- 温熱ヘッド表面をティシューなどでふき取ります。
- 一度使用されたコットンを再度使用しますと、肌トラブルを起こす原因となりますので再使用しないでください。

ステップ2 温モイストアップ

化粧水の保湿成分を肌に浸透させ、お肌を保湿ケアするモードです。

コットンを使用する場合

1 新しいコットンを本体に取り付けリングで固定します。

- コットンの取り付けは、4ページを参照ください。

2 コットンにふだんお使いの化粧水を含ませます。

- 乳液やゲル・ジェルタイプやとろみの強い化粧品は使用しないでください。
- コットンの裏側まで、染み込む程度に含ませます。

使いかた

3 電源アダプターの本体接続を確認して電源スイッチを押します。

- レベル表示ランプの「弱」が点灯して「温モイストアップ」のモード表示ランプが点滅します。別のモードが点滅している場合はモード切替ボタンを押して切り替えます。

「温クレンジング」モード終了後
の場合は、電源スイッチを押す
と自動的に「温モイストアップ」
モードに設定されます。



4 レベル切替ボタンで電位の「つよさ」を選択します。

肌の調子に合わせてレベル切替ボタンで「つよさ」を切り替えます。

- レベル切替ボタンを押すたびに電位の「弱」・「中」・「強」が切り替わります。振動のつよさは変わりません。

使い初めの方や違和感を感じた方は「弱」にして使用されることをおすすめします。

5 本体の背面プレートに手が触れるよう握ります。

- 必ず、背面プレートに手が触れるよう本体を握ってください。



6 コットンを肌にあてゆつくりと動かします。

- モード表示ランプが点灯に替わり振動します。
- 使用時間は3分以内です。

注意

背面プレートに触れてコットンを肌にあてないと振動しません。
(お肌検知機能)

温熱ヘッドが振動していないと機能していません。

振動しないまま3分間放置しますと、自動的に電源が「切」になります。
(オートオフ機能)


お知らせタイマー機能

約45秒ごとに「ピッ」というブザー音でお手入れ時間の目安をお知らせします。

[お手入れ順序の例]

図のように顔からデコルテを4つのゾーンにわけます。

①②両ほほ→③Tゾーン→④デコルテの順にヘッドを移動することで全体を効率よく均等にお手入れできます。

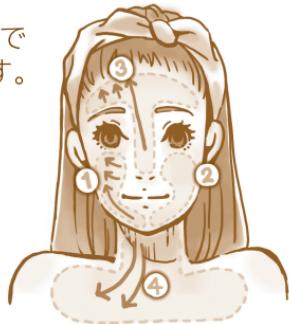

- 軽くあて、顔の中心部から外側へすべらせるようにゆっくり移動させます。

！注意

コットンは肌の同一部位に留めず移動させる。
(肌のトラブルや体調不良の原因)

- コットンの水分がなくなったり、すべりづらい場合は化粧水をつぎ足してください。
- 同一部位の使用は10秒以内にします。
- 使用中、微電流の刺激(ピリピリ感)を感じるときはレベル切替ボタンを押して「弱」にします。それでも「ピリピリ感」を感じる場合は、化粧水をつぎ足してご使用ください。

7 3分経つと自動停止します。（オートオフ機能）

- 終了音(ピィピィ)でお知らせします。

8 ご使用後は、必ず電源アダプターをコンセントから抜きます。

引き続き次のモードをご使用される場合は、電源アダプターを接続しておきます。

9 リングとコットンをはずします。


- 温熱ヘッド表面をティッシュなどでふき取ります。
- 一度使用されたコットンを再使用しますと、肌トラブルを起こす原因となりますので再使用しないでください。

使いかた

コットンを使用しない場合

温モイストアップ時、コットンに染み込みにくいゲル・ジェルタイプ（保湿を目的としたオールインワンタイプの化粧品）やとろみが強いタイプの化粧水を使用する場合はコットンをとりつけず使用することができます。

- 1 ふだんお使いのとろみが強いタイプの化粧水またはゲル・ジェルタイプの化粧品を温熱ヘッドの上にのせて、指でヘッド全体に伸ばします。

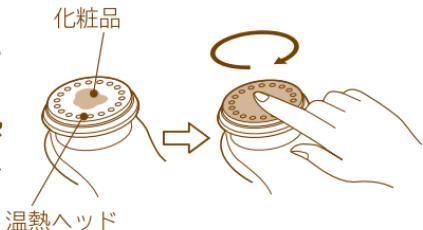

- 2 電源アダプターの本体接続を確認して電源スイッチを押します。

- レベル表示ランプの「弱」が点灯して「温モイストアップ」のモード表示ランプが点滅します。別のモードが点滅している場合はモード切替ボタンを押して切り替えます。

「温クレンジング」モード終了後の場合は、電源スイッチを押すと自動的に「温モイストアップ」モードに設定されます。



- 3 レベル切替ボタンで電位の「つよさ」を選択します。

肌の調子に合わせてレベル切替ボタンで「つよさ」を切り替えます。

- レベル切替ボタンを押すたびに電位の「弱」・「中」・「強」が切り替わります。振動のつよさは変わりません。

使い初めの方や違和感を感じた方は「弱」にして使用されることをおすすめします。

4 本体の背面プレートに手が触れるよう握ります。

- 必ず、背面プレートに手が触れるよう本体を握ってください。



5 溫熱ヘッドを直接肌にあてゆっくりと動かします。

- モード表示ランプが点灯に替わり振動します。
- 使用できる時間は3分以内です。

注意

背面プレートに触れてヘッドを肌にあてないと振動しません。
(お肌検知機能)

温熱ヘッドが振動していないと機能していません。振動しないまま3分間放置しますと、自動的に電源が「切」になります。
(オートオフ機能)


お知らせタイマー機能

約45秒ごとに「ピッ」というブザー音でお手入れ時間の目安をお知らせします。

[お手入れ順序の例]

図のように顔からデコルテを4つのゾーンにわけます。

①②両ほほ→③Tゾーン→④デコルテの順にヘッドを移動することで全体を効率よく均等にお手入れできます。

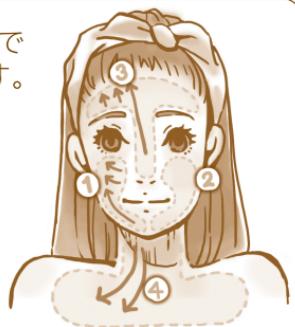

- すべりづらい場合は、ヘッドに化粧品をつぎ足してください。
- 軽くあて、顔の中心部から外側へすべらせるようにゆっくり移動させます。

！注意

温熱ヘッドは肌の同一部位に留めず移動させ
る。(肌のトラブルや体調不良の原因)

- 同一部位の使用は10秒以内にします。
- 使用中、微電流の刺激(ピリピリ感)を感じるときはレベル切替ボタンを押して「弱」にします。それでも「ピリピリ感」を感じるときはヘッドに化粧品をつぎ足してください。

使いかた

6 3分経つと自動停止します。（オートオフ機能）

- 終了音(ピィピィ)でお知らせします。

7 ご使用後は、必ず電源アダプターをコンセントから抜きます。

引き続き次のモードをご使用される場合は、電源アダプターを接続しておきます。

8 溫熱ヘッドや本体についた化粧品は、ティシューなどでふき取ります。

ステップ3 溫マスク

（乳液の場合は1日に1回、シートマスクの場合は1週間に1～2回のご使用をおすすめします。）

きめ細やかな微振動と、緩やかな電極の切り替えで乳液やシートマスクの効果をサポートします。

1 シートマスクを顔にのせるか、ふだんお使いの乳液やクリームを顔全体にまんべんなくのばします。

- 手についた化粧品はふきとってください。

2 電源アダプターの本体接続を確認して電源スイッチを押します。

- レベル表示ランプが「弱」が点灯して「温マスク」のモード表示ランプが点滅します。別のモードが点滅している場合はモード切替ボタンを押して切り替えます。

「温モイストアップ」モード終了後の場合は、電源スイッチを押すと自動的に「温マスク」モードに設定されます。



3 レベル切替ボタンで電位の「つよさ」を選択します。

肌の調子に合わせてレベル切替ボタンで「つよさ」を切り替えます。

- レベル切替ボタンを押すたびに電位の「弱」・「中」・「強」が切り替わります。振動のつよさは変わりません。

使い初めの方や違和感を感じた方は「弱」にして使用されることをおすすめします。

4 本体の背面プレートに手が触れるよう握ります。

- 必ず、背面プレートに手が触れるよう本体を握ってください。



5 温熱ヘッドをあてゆっくりと動かします。

シートマスクを使用する場合はシートマスクの上をすべらせます。

- モード表示ランプが点灯に替わり振動します。
- 使用できる時間は3分間以内です。

注意

背面プレートに触れて温熱ヘッドを肌にあてないと振動しません。(お肌検知機能)

温熱ヘッドが振動していないと機能していません。振動しないまま3分間放置しますと、自動的に電源が「切」になります。(オートオフ機能)


お知らせタイマー機能

約45秒ごとに「ピッ」というブザー音でお手入れ時間の目安をお知らせします。

[お手入れ順序の例]

図のように顔からデコルテを4つのゾーンにわけます。

①②両ほほ→③Tゾーン→④デコルテの順にヘッドを移動することで全体を効率よく均等にお手入れできます。

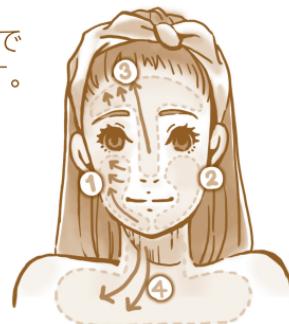

- 軽くあて、顔の中心部から外側へすべらせるようにゆっくり移動させます。

！注意

温熱ヘッドは肌の同一部位に留めず移動させる。(肌のトラブルや体調不良の原因)

- 同一部位の使用は10秒以内にします。

使いかた

- 使用中、微電流の刺激(ピリピリ感)を感じるときはレベル切替ボタンを押して「弱」にします。

6 3分経つと自動停止します。(オートオフ機能)

- 終了音(ピィピィ)でお知らせします。

7 ご使用後は、必ず電源アダプターをコンセントから抜きます。

引き続き次のモードをご使用される場合は、電源アダプターを接続しておきます。

8 湿熱ヘッドや本体についた化粧品は、ティッシュなどでふき取ります。

ステップ4 クール

ひんやりとした冷却効果でヘッド部表面を周囲温度から約10℃下げて肌の毛穴をひきしめるモードです。

⚠ 警告

周囲温度は、10~40℃で使用する。

(低温で使用するとヘッドが冷えすぎ肌を傷める原因)


注意

- 「クール」モードを連続で使用した場合、冷却ヘッドが冷えにくくなり、警告音(ピッ、ピッ)と「クール」のモード表示ランプ点滅でお知らせすることがあります。

1 電源アダプターの本体接続を確認して電源スイッチを押します。

- レベル表示ランプが消灯して「クール」のモード表示ランプが点滅します。別のモードが点滅している場合はモード切替ボタンを押して切り替えます。

「温マスク」モード終了後
の場合は、電源スイッチを押す
と自動的に「クール」モードに
設定されます。

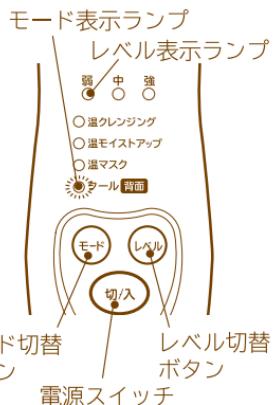

2 冷却ヘッドが冷えるまで待ちます。


- 冷却準備に10秒かかります。準備中は「クール」のモード表示ランプが点滅します。
- 使用可能になると、準備完了音が「ピィピィッ」と鳴り、モード表示ランプが点灯します。

注意

- 「クール」のモードでは振動しません。

3 冷却ヘッドを直接肌に軽くあてパッティングの要領でゆっくり移動させます。

- モード表示ランプが点灯に替わります。冷却ヘッドは振動しません。
- 使用できる時間は1分50秒以内です。
- 同一部位の使用は1秒程度で「あてる・はなす」を顔の中心部から外側へ繰り返します。

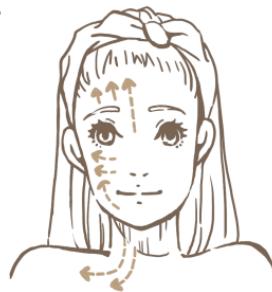

注意

- 肌に当てた冷却ヘッドをすべらせないでください。
- 肌の同一部位に止めないでください。
冷却ヘッドの冷却効果が弱くなります。

4 1分50秒経つと自動停止します。(オートオフ機能)

- 終了音(ピィピィ)でお知らせします。
- 「クール」が終了すると、本体および冷却ヘッドが少し熱くなりますが、異常ではありません。

使いかた

5 ご使用後は、必ず電源アダプターをコンセントから抜きます。



- 肌に残っていた化粧品などが冷却ヘッドや本体についた場合は、ティシューなどでふき取ります。
- 使用中、電源アダプターが少し熱くなることがあります、故障ではありません。

注意

使用中にモード表示ランプとレベル表示ランプが全て点滅に変わり、異常検知音「ピィ——」が鳴ると故障の警告です。電源アダプターをコンセントから抜き、販売店に修理を依頼ください。

お肌検知機能について

- 本器は、人体を介して動作する商品です。
背面プレートと温熱ヘッドに肌が触れることで電気的な回路が動作します。
背面プレートに触れ、温熱ヘッドを肌にあてないと動作しません。

海外でのご使用について

- この商品は交流100-240V電源でAプラグのコンセントが使用できます。
- 同一国内でも地域により電圧およびプラグ形状が異なる場合がありますので、現地で十分お確かめください。





⚠ 注意	使用前に必ずコンセントの電圧を確かめる。 (火災・感電の原因)
	交流100-240V以外の電源は使用しない。 (火災・感電の原因)

- 電圧およびプラグ形状については、現地のホテルや旅行社などにご相談ください。


■ プラグアダプターの種類

- おもな種類(本品には付属していません。)

(mm)

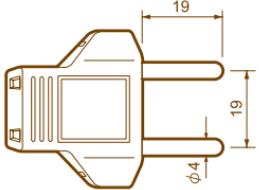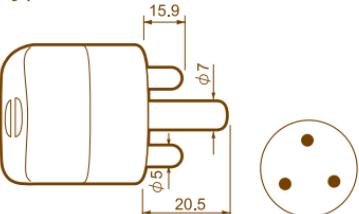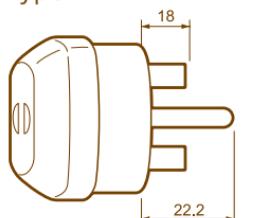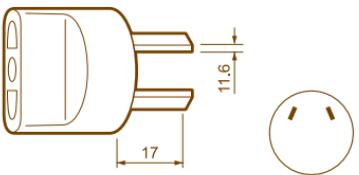・ Type-C	 A Type-C plug with two vertical pins and a ground pin. Dimensions: width 19mm, height 19mm, and ground pin diameter φ4mm.	・ Type-B	 A Type-B plug with two vertical pins and a ground pin. Dimensions: width 15.9mm, height 20.5mm, and ground pin diameter φ5mm. The plug has a width of 15.9mm and a height of 20.5mm.
・ Type-BF	 A Type-BF plug with two vertical pins and a ground pin. Dimensions: width 18mm, height 22.2mm, and ground pin diameter φ4mm.	・ Type-O	 A Type-O plug with two vertical pins and a ground pin. Dimensions: width 11.6mm, height 17mm, and ground pin diameter φ4mm.

- プラグアダプターは、使用される商品の消費電力に見合う容量のものをご使用ください。
- 購入される場合は、空港などの免税店や現地のホテル・旅行社などにご相談ください。
- Aプラグ地域では、プラグアダプターなしで使用できます。

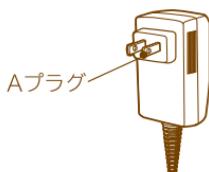

お手入れ

- 本体やリングについた化粧品はティシューなどでふき取ります。
- 汚れが落ちにくいときは、水を含ませて固く絞った布でふき取ります。

⚠ 警告	水洗いしない。また水につけたり、水をかけたりしない。(故障の原因)
⚠ 注意	電源アダプターは必ずコンセントから抜く。(誤ってスイッチを入れると刺激を受けたり、誤動作の原因)

注意

アルコール、ベンジン、シンナーなどは使用しない。
(変形、変色の原因)



保存のしかた

- 本体は付属品のスタンドに置いて湿気やホコリの少ない所に保存します。
- スタンドには、本体の他にリングが収納できます。

⚠ 警告	水のかかるところや浴室など湿気の多いところに放置しない。(故障の原因)
	コードは電源アダプターや本体に巻きつけない。 (コードが損傷する原因)

注意

直射日光の当たるところ(夏期の自動車内など)、熱器具の近くや高温な場所に放置しない。(変形、変色の原因)

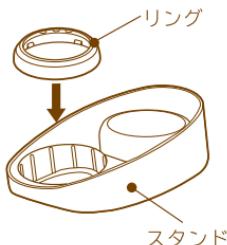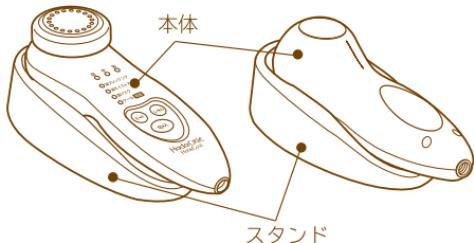

「故障かな」と思ったときは

つづく

修理を依頼される前に、次のことをお調べください。

症 状	点検するところ	直しかた
モード表示ランプが点滅しない。	電源アダプターを差し込んでいますか。	充電式ではありません。電源アダプターを差し込んでください。
温熱ヘッドが振動しない。	電源スイッチは「入」になっていますか。	電源スイッチを入れてください。
	背面プレートに手が触れてていますか。	お肌検知機能が働いていません。背面プレートに触れて肌にあてます。
	温熱ヘッドの保護シールをはがしていますか。	保護シールをはがしてください。
	コットンに化粧水が含まれていますか。	コットンの裏側まで染み込む程度に化粧水を含ませてください。
振動しない。	「クール」モードではありませんか。	「クール」モードでは振動しません。
警告音が鳴り、「クール」のモード表示ランプの点滅が止まらない。(ピィー)	「クール」モードを連続で使用していませんか。	故障ではありません。1時間程度時間をおいて、再度お使いください。
異常検知音が鳴り、全ランプの点滅が止まらない。(ピッ、ピッ)	本体の故障です。	電源プラグを抜いて修理を依頼してください。

「故障かな」と思ったときは

症 状	点検するところ	直しかた
「リングが取りつけできない。	コットンの種類によってはサイズが異なり、リングが合わない場合があります。	別のコットンをご使用ください。
	リングを逆向きに取りつけていませんか。	内側のせまい方を上にしてコットンにかぶせて取りつけてください。
冷却ヘッドが冷えない。	「クール」モードを連続で使用していませんか。	1時間以上おいてから使用してください。
	周囲温度が10°C未満になっていますか。	冷却ヘッドの表面温度と周囲温度の差がなくなり冷たく感じない場合があります。温かい場所でご使用ください。
温熱ヘッドを肌にあてなくとも振動する。	水道の蛇口などアース(接地)に触れていますか。	アース(接地)を介して本体の背面プレートに触ると動作する場合があります。使用中はアースに触れないでください。
温熱ヘッドが温まらない。	周囲温度が10°C未満になっていますか。	周囲温度が低いと温まるまで時間がかかります。温かい場所でご使用ください。
	周囲温度が40°C以上になっていますか。	温熱ヘッドの表面温度と周囲温度の差がなくなり温かく感じない場合があります。30°C以下の場所でお試しください。

以上のことをお調べになり、それでも具合が悪いときは、ご自分で修理なさらないで、お買い上げの販売店にご相談ください。

Q1.肌に「ピリピリ感」を感じる。

- レベルが「強」になっていませんか?
→レベル切替ボタンを押して「弱」に切り替えてください。
- コットンの水分がなくなっていますか?
→コットンに化粧水を少量つぎ足してください。
※肌に違和感を感じる場合は、使用を中止して専門医にご相談ください。

Q2.「温クレンジング」モードは、メイク落としに使えませんか。

- 本器でメイク落としはできません。
→メイクはクレンジング剤で落としてください。

Q3.強く押し当てた方が効果があるのではないか。

- 電気の性質を利用して汚れを引き出したり、お肌を保湿しますので強く押し当てる必要はありません。
→お肌に軽くあてゆっくりと動かしてください。

Q4.コットンが取りつけできない。

- コットンの種類によってはサイズや形状が異なり、取りつけできない場合があります。
→別のコットンをご使用ください。

Q5.お風呂場で使用してもよいか。

- 防水構造ではありません。
→水のかかる場所や湿気の多い所で使用したり、保存しないでください。

Q6.化粧水をつけたまま「クール」モードを使用してもよいか。

- ご使用はできますが、化粧水に働きかけるような効果はありません。

トラブルQ&A

Q7.「クール」モードで冷却ヘッドが冷たく感じない。

- 「クール」モードに切替えて、2分以上経過していませんか。
→冷却準備(約10秒)が終わると自動的に使用モードになり、更に1分50秒経過すると自動的に「クール」モードを停止します。
- 「クール」モードを連続して使用していませんか。
→連続使用すると冷却機能が低下するため冷却ヘッドの温度は初期より上がります。
→同一部位に連続使用すると肌表面の温度が下がり、冷たく感じない場合があります。他の部位に当てて確認してください。

Q8.乳液やゲル状の化粧品を使用してもよいか。

- コットンをとりつけて使用する場合は化粧水以外の化粧品を使用できません。
→化粧水や角質除去効果のあるふき取り化粧水をご使用ください。
- 「温モイストアップ」をコットン無しで使用する場合、「温マスク」モード時は化粧水以外も使用可能です。
詳しくは4ページの各モードと化粧品をご確認ください。

Q9.シミを取ったり美白効果はありますか。

- シミを取ったり美白効果はありません。
→お肌の毛穴の奥についていた取れにくい汚れを引き出し、お肌を保湿します。

Q10.使用できない肌の具合はどのような場合か。

- 7~8ページの安全上のご注意に記載した方や部位には使用できません。

Q11.その他のトラブル

- お肌に異常がある場合は、すみやかに使用を中止し、専門医にご相談ください。
- 機器に異常がある場合は、お買い上げの販売店または31ページのエコーセンターにご相談ください。

お客様ご相談窓口

日立家電品についてのご相談や修理はお買い上げの販売店へ

なお、転居されたり、贈物でいただいたものの修理などで、
ご不明な点は下記窓口にご相談ください。

※下記窓口の内容は、予告なく変更させていただく場合がございます。

ホームページに「よくあるご質問」について掲載しております
ので、ご活用ください。

http://kadenfan.hitachi.co.jp/q_a/index.html

商品情報やお取り扱いについての
ご相談はお客様相談センターへ

TEL 0120-3121-11
FAX 0120-3121-34

(受付時間) 9:00~17:30(月~土)
9:00~17:00(日・祝日)

年末年始は休ませていただきます。
携帯電話、PHSからもご利用できます。

修理に関するご相談は
エコーセンターへ

TEL 0120-3121-68
FAX 0120-3121-87

(受付時間) 9:00~19:00(月~土)
9:00~17:30(日・祝日)

携帯電話、PHSからもご利用できます。

- 「持込修理」および「部品購入」については、上記サービス窓口にて各地区のサービスセンターを紹介させていただきます。
- ご相談、ご依頼いただいた内容によっては弊社のグループ会社に個人情報を提供し対応させていただくことがあります。
- 修理のご依頼をいただいたお客様へ、アフターサービスに関するアンケートハガキを送付させていただくことがあります。

保証とアフターサービス (必ずお読みください。)

この商品の保証とアフターサービスについては、日本国内においてのみ適用します。

保証書 (一体)

- この商品は保証書つきです。
- 保証書は、必ず「お買い上げ日」・「販売店名」などの記入をお確かめの上、販売店から受け取っていただき、内容をよくお読みの後、大切に保存してください。

保証期間

お買い上げの日から1年間

修理を依頼されるときは

持込修理

27~28ページに従って調べていただき、なお異常があるときは使用を中止し、必ずお買い上げの販売店にご相談ください。

■ 保証期間中は

修理に際しましては、保証書をご提示ください。

保証書の記載内容に基づいて修理させていただきます。

■ 保証期間が過ぎているときは

修理によって機能が維持できる場合は、ご希望により有料で修理させていただきます。

■ 修理料金のしくみ (修理料金=技術料+部品代)

技術料	診断、部品交換、調整、修理完了時の点検などの作業にかかる費用です。技術者の人件費、技術教育費、測定機器などの設備費、一般管理費などが含まれます。
部品代	修理に使用した部品代金です。その他修理に付帯する部材等を含む場合があります。

補修用性能部品の保有期間

- 当社は、この保湿サポート器の補修用性能部品を、製造打ち切り後5年間保有しています。
- 補修用性能部品とは、その製品の機能を維持するために必要な部品です。

ご不明な点や修理に関するご相談は

修理に関するご相談並びにご不明な点は、お買い上げの販売店または31ページのご相談窓口にお問い合わせください。

仕様

定格電圧	AC100-240V 50-60Hz 共用	
入力容量	23-28VA (電源アダプター: KH-84)	
消費電力	ステップ1.2.3	約4.3W (室温25°C)
	ステップ4 (クール)	約13W (室温25°C)
定格時間	最大11分間	
質量	本体: 約150g	電源アダプター: 約120g
付属品	リング(2個)、スタンド	

製品を廃棄するときのお願い

- この製品には、リサイクル可能な部品が含まれています。
廃棄に際しては、お住いの地域の条例などに従って処理してください。

長年ご使用の保湿サポート器の点検を！		
愛情点検 	こんな症状はありませんか <ul style="list-style-type: none">・電源アダプターが異常に熱くなる。・本体が変形していたり、こげくさい臭いがする。・その他の異常・故障がある。	お願い 故障や事故防止のため、電源スイッチを「切」にし、電源プラグをコンセントから抜いて、必ず販売店にご相談ください。

販売元: 日立コンシューマ・マーケティング株式会社 リビングサプライ社
〒162-0814 東京都新宿区新小川町6-29 アクロポリス東京

製造元: 日立マクセル株式会社
〒822-1296 福岡県田川郡福智町伊方4680

Product warranty and after-sales are valid in Japan.

Sensitivity test (P.3)

To prevent skin trouble, carry out a patch test in advance.

- When you use a cosmetic product for the first time, perform a patch test (skin test) and check your skin.

(1) Wash the inside of your arm with soap, and wipe it down with a towel, or the like.

(2) Apply the cosmetic product to the skin area you have washed and leave it as is for 48 hours.

- Apply a 10-yen-coin-size light coating, and let it dry naturally.

- Do not run water over or rub the patch-tested part.

CAUTION

If any abnormality occurs on the application part, such as a rash, reddening, itching or irritation, immediately stop testing and wash away.



(3) Check that there is no abnormality.

The skin lotion can be used if no abnormality occurs within 48 hours.

(4) If you find something unusual with your skin after the patch test, do not use the cosmetic product with this device.

- Check your skin by testing if this device and your regular cosmetic product go well together.

(1) Wash the inside of your arm with soap and wipe dry with a towel.

(2) Place this device on the skin area you have washed for about 10 seconds by following the directions on how to use "Step

(3) You can use the device if there is nothing unusual with your skin after following the procedures in the above-mentioned patch test and leaving the skin as it is for 48 hours.

Before use (P.4)

⚠ CAUTION	Never use the device when you have a wound or an inflammation on your skin. (Cause of problems with or damage to your skin.)
	Remove jewelry or contact lenses. (Cause of problems with your skin or poor health)

1. About mode switching

Mode	Cotton and Cosmetics
Hot Cleanse (cleans fine residue remaining in pores)	Use new cotton saturated with your regular skin lotion.
Hot Moisturize (performs moisturizing care by allowing moisturizing ingredients to penetrate into skin)	Use new cotton saturated with your regular skin lotion. If you use a gel-like or thick skin lotion, you can also apply it to your skin without using cotton.
Hot Mask (enhances the effect of milky lotion or sheet mask)	Use your regular milky lotion or a sheet mask by applying to skin. Do not use cotton.
Cool (tightens the pores of your skin by cooling effect)	Apply the cooling head directly to your skin. Do not use cotton and skin lotion.

- Clean skin by washing your face so that makeup and dirt will wash off.

Wipe off makeup with a cleansing product.

- Attach cotton to the body of the device.

(1) Remove the protection seal from the heating head.

Unless the protection seal is removed, the device will not operate.


(2) Place cotton over the head and attach it with the included ring.

Use commercially available cotton. However, small cotton or thick cotton may not work in some cases.

The ring has an orientation with a clear direction. Attach it from straight above with the wider part of the inner circumference placed toward the heating head.

Do not attach the ring in the reverse direction. Please be careful not to squeeze it, otherwise, it cannot be removed.

The narrower side should be upward.

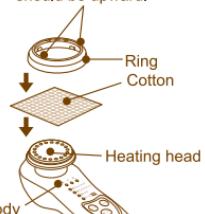

- How to remove the ring.


• Remove the ring by pulling it straight up while holding down the lower part.

- Please observe the following so as not to damage your skin when you use the device.

(1) The maximum amount of time allowed for skin care with use of this device is 8 minutes per day in basic mode. (Limit use of step 1,2,3 to

no more than 3 minutes per day. Limit use of step 4 to no more than once a day.)



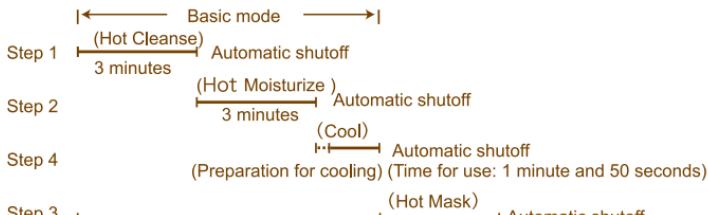

- Limit use of the device to no more than 11 minutes per day including use of "Hot Mask."
- It is recommended that you use "Hot Mask" once a day for milky lotion or once or twice a week for sheet mask.
- (2) Use the device on bare skin after removing makeup.
- (3) Do not use the device on the same area of skin for more than 10 seconds.
- (4) Switch between high and low by pressing the level switch button according to the condition of your skin.
- You can choose high, medium and low as you like. If your skin tingles, use the device on "Low."
- If you feel something unusual with your skin, stop using the device and consult a skin care specialist.

Names of parts and their functions (P.6)

① Heating head (titanium material)

Attach cotton and apply it to your skin.

The device vibrates while being used in modes other than "Cool."

② Mode indicator lamp

Mode	During preparation	During use
Hot Cleanse	Orange lamp flashing	Orange lamp lights
Hot Moisturize		
Cool	Blue lamp flashing	Blue lamp lights

③ Mode switch button

Every time the button is pressed, the mode for use will be switched.

("Hot Cleanse" is initially set.)

④ Power switch (Off/On)

Turn on the power switch, and it will turn "On."

Press it again, and it will turn "Off." "An automatic shutoff function is equipped, so if the device is not used for 3 minutes, it will automatically turn "Off."

⑤ Body

⑥ Body socket

⑦ Level indicator lamp

When the power switch is switched to "On," the lamp indicating "Low" is turned on. This lamp is not turned on in "Cool" mode.

⑧ Level switch button

Every time the button is pressed, "the strength" of the electrical potential will change. There will be no change in vibration strength. ("Low" is initially set.)

⑨ Buzzer (Switching sound/ready sound/warning sound/finish sound/indicating timer sound)

Every time the switch or button is pressed, the switching sound will beep. When the preparation is completed in "Cool" mode, the ready sound will beep. The warning sound will beep to indicate the continuous use of "Cool" mode. In the event of a failure, an abnormality detection sound will beep. When each mode is finished, the finish sound will beep.

⑩ Cooling head (aluminum material)
Apply this head to your skin in "Cool" mode.

⑪ Back plate (titanium material)

Touch this part and apply the heating head to your skin in modes other than "Cool," and the device will start to operate.

⑫ Power adaptor

Model: KH-84

⑬ Power plug

⑭ Instrument plug

⑮ Cord

⑯ Accessories

⑰ Rings (two) : Rings for attaching cotton.

⑱ Stand

Safety precautions (P.7-10)

• Precautions described here are intended for safe and correct use of this product and are to prevent injury and damage to you and others before they occur.

• Precautions are classified as follows.

Make sure to observe the precautions because they are related to safety and important details.

DANGER	Indicates that improper handling may result in death or serious injury to a user, and the extent of hazard that its urgency is high.
WARNING	Indicates the extent of hazard that improper handling is predicted to result in death or serious injury to a user.
CAUTION	Indicates the extent of hazard or damage that improper handling is predicted to result in slight injury to a user or damage to property (house, household effects, etc.).

	The symbol indicates "Prohibited" (Do not do this). "Disassembly prohibited" "Use prohibited in wet areas" "Prohibited from being made wet" "Prohibited from use with wet hands"			
	The symbol indicates "Compulsory" (Make sure to do this). "General action"			

DANGER



Persons who use the following medical electric devices should not use this product. (This product may cause malfunction of medical electric devices.)

- Self-contained medical electric devices such as a pacemaker
- Wearable medical electric devices such as an electrocardiograph

WARNING



Never use this product by other methods which are not described in this instruction manual. (Cause of accidents, trouble and failure)

Use this product only for face and neck. (Cause of accidents or trouble)

The following persons should avoid use of this product.

(Cause of accidents or trouble)

- | | |
|---|---|
| - Persons with a heart disease | - Persons with an acute (pain) disease |
| - Persons with a febrile disease | - Persons with a blood pressure disorder |
| - Persons with an infectious disease | - Persons with a tubercular disease |
| - Persons who have a malignant tumor | - Persons with facial neuralgia |
| - Persons who are pregnant | - Persons who are menstruating |
| - Persons with atopic dermatitis | - Persons with an allergic predisposition |
| - Persons with particularly sensitive skin | - Persons with hemophilia |
| - Persons under dental treatment | |
| - Persons whose bile capillaries have expanded due to long time use of steroid hormones or liver function disease | |
| - Persons who are under the influence of alcohol or medication, or who are very tired | |

Do not use this product on the following regions. (Cause of skin trouble etc.)

- | | |
|---|------------------------------|
| - Region where orthopedic treatment was given | - Eye ball and upper eye lid |
| - Wound site | - Facial melanoderma |
| - Region of mucosal membrane such as inside of mouth | - Lips |
| - Region irritated due to pimples or skin rash | |
| - Regions which suffer from algesthesia or perception disorder | |
| - Regions where metal, plastic or silicone etc., is embedded under skin | |

- Regions where there is itching, redness, or psychotic fleck due to physical stimulus etc.
- Regions where skin irritation is caused by cosmetics

Use only 100-240V AC for power supply. (Cause of fires and electric shocks)

Do not allow children to use this product. Also, do not place within close reach of infants. (Cause of accidents or failure)



When feeling pain or disorder during use of this product, and sensing anything wrong with your skin after use, stop using and consult a dermatologist.

(Cause of skin trouble etc.)



If any abnormality occurs during charge or use, immediately pull out the power plug of the power adaptor from the outlet. (Cause of accident or fire)



Never use a power cord or a power plug if they are damaged or insertion to the outlet is loosened.

(If the power cord breaks, fires or electric shocks may occur.)

Never damage the power cord, unnecessarily bend, pull, twist, bind, place a heavy object on it, pinch, process, or wind around the power adaptor, etc.

(If the power cord breaks, fires or electric shocks may occur.)

Do not use this product near inflammable substances (gasoline, benzene, thinner, etc.). (Cause of explosion or fire)



If any unusual sound or abnormality occurs on the main body, immediately stop using and contact the distributor for repair together with the power adaptor. (Cause of accidents and trouble)

Follow the description of the instruction manual for the operating time and operation frequency. (Cause of accidents and trouble)

Use this device at an ambient temperature from 10 to 40°C. (If you use "Cool" mode at low temperature, the head may be overcooled, damaging the skin.)

Person who uses this device for the first time should use this while observing the condition of their skin. (Cause of skin trouble and poor physical condition)

Do not use this product beyond the specified operating time. (Cause of skin trouble)



Make sure to disconnect the power cord from the outlet for maintenance.

Never connect or disconnect the power plug to/from the outlet with wet hands.

(Cause of electric shocks and short-circuits)



Absolutely never clean the power adaptor with water.

And, never soak it in water or splash water on it. (Cause of failures and short-circuits)



Never use, charge or leave in a place where water is splashed such as the bathroom or in a place with high humidity. (Cause of failures and short-circuits)



Never modify the shaver. Only a qualified technician may make repairs.

(Cause of fires, electric shocks, injuries and failures)



CAUTION

Check the heating or cooling head for any damage or deformation before use. (Cause of damage to skin)

Never use this product together with other beauty treatment devices at the same time. (Cause of failures and troubles)

Never use this product if there is some injury or wound to the skin. (Cause of skin trouble or pain)

Do not leave this product in a place where the temperature becomes high such as the inside of a vehicle. (Cause of failure)

Do not drop this product, or give a strong impact. (Cause of injury or failure)

Do not wipe with alcohol, benzene or thinner, and do not spray insecticide. (Cause of cracking, electric shock and ignition)

Use only the attached power adaptor. And, do not charge any other product with the attached power adaptor. (Possibility of electric shock and ignition)



Remove accessories such as earrings and necklaces, and contact lenses for use. (Cause of accidents or trouble)

If there is any severe skin disorder or irregularity on the skin surface, or due to downy hair, in rare instances you may feel strong irritation. In this case, avoid using this product on that region. (Cause of accidents or trouble)

Do not stop the cotton on one part of the skin but always keep it in motion. (Cause of skin trouble or bad physical condition)

Pull out the power plug and device plug without holding the cord. (Cause of breakage, electric shock, short-circuit and ignition)

When there are people around the device, pay attention to any sudden movement during use. (Cause of injury)



Make sure to pull out the power plug from the outlet unless used.

(Cause of electric shock and fire due to deterioration)

Example for use (P.11)

Press the mode switch button and set the mode of your preferred treatment.

Quick tighten treatment (Required time: 2 minutes)

- Step 4 Cool

When you want to tighten your pores or cool down your skin before applying make up, you can just use "Cool." After 10-second preparation for cooling, it only takes one minute and 50 seconds to tighten the pores of your skin. Press the mode switch button to set to "Cool."

Quick moisturize treatment (Required time: 3 minutes)

- Step 2 Hot Moisturize

When you do not have much time in the morning or when you need to go out suddenly, you can just use "Hot Moisturize." It only takes three minutes to moisturize your skin thoroughly.

Press the mode switch button to set to "Hot Moisturize."

Tighten treatment (Required time: 5 minutes)

- Step 1 Hot Cleanse
 - Step 4 Cool

When you want to remove fine residue remaining in pores and tighten the pores of your skin, use "Cool" after using "Hot Cleanse." This treatment tightens the pores of your skin.

After the "Hot Cleanse" mode is finished, press the mode switch button to set to "Cool."

Moisturize treatment (Required time: 6 minutes)

- Step 1 Hot Cleanse
 - Step 2 Hot Moisturize

Before you go out or when you have more time, use "Hot Moisturize" after using "Hot Cleanse." This treatment moisturizes the clean skin thoroughly.

Daily treatment (Basic mode) (Required time: 8 minutes)

- Step 1 Hot Cleanse
 - Step 2 Hot Moisturize
 - Step 4 Cool

Step 1: See

After using "Hot Cleanse," moisturize the clean skin in "Hot Moisturize and tighten the pores of your skin by cooling effect in "Cool." After the "Hot Moisturize" mode is finished, press the mode switch button to set to "Cool".

Recommended full treatment (Required time: 11 minutes)

- Step 1 Hot Cleanse
 - Step 2 Hot Moisturize
 - Step 3 Hot Mask
 - Step 4 Cool

Care for your skin once or twice a week by using all modes.

Fine vibrations in "Hot Mask" mode and gentle switching of the electrode will condition the skin. The cooling effect of "Cool" mode will tighten the pores of your skin.

How to use (P.13-24)

- Make sure to use only 100-240V AC for power supply and use the included power adaptor (this device is not rechargeable).
 - After the power switch is switched to "On," the heating head warms slowly.

⚠ WARNING	<p>Do not use the product around eyes and ears. (Cause of accidents or bad physical condition)</p> <p>If you feel something is unusual with your skin or body while using the device, stop using it immediately and consult a skin care specialist. (Cause of accident or poor health)</p>
------------------	--

Step 1 Hot Cleanse

Step 1: Hot Cleanse This mode removes fine residue remaining in pores which cannot be removed by just washing.

1. Saturate cotton attached to the body with skin lotion after washing your face.
Please use your regular skin lotion or rubbing-off skin lotion with an exfoliating effect.
(Do not use milky lotion or a gel-like or thick skin lotion.)
● Saturate the cotton with lotion to the extent that lotion permeates the back of the cotton.

Some skin lotion (just with mineral spring or water) may be difficult to bring out a good effect.


- 2 After confirming that the power adaptor is connected to the main body, press the power switch.

To the main body, press the power switch. The level indicator lamp will be turned on, and "Hot Cleanse" on the mode indicator lamp will start flashing. If a lamp in another mode is flashing, press the mode switch button to switch to "Hot Cleanse".

- 3 Choose "the strength" of electrical potential with the level switch button. Switch the "strength" with the level switch button according to the condition of your skin.

- Every time the level indicator button is pressed, the high, medium, and low of the electrical potential will be switched.

medium, and low of the electrical potential will be no change in vibration strength.

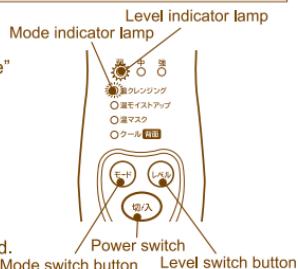

It is recommended that when using the device for the first time or if you feel some discomfort, use the device in "Low".

- Hold the device with your hand touching the back plate of the body.
 - Make sure to hold the body with your hand touching the back plate.
- Apply cotton to the skin and move the device slowly.
 - The mode indicator lamp will switch and turn on, and the device will start to vibrate.
 - The time for use is within 3 minutes.

Cautions

Unless you apply the cotton to your skin while touching the back plate, the device will not vibrate.
(skin sensing function)

If the heating head is not vibrating, the device is not working.

If you leave the device as it is for 3 minutes without vibration, the device will automatically switch "Off."
(Automatic shutoff function)

Indicating timer function


Skin care time is indicated by the buzzer beeping about every 45 seconds as a guide.

[Example of skin care sequence]

Divide the area from your face to décolletage into four zones as shown in the illustration.

By moving the heating head in the order of ①②Both cheeks → ③T-zone → ④décolletage, the whole area can be efficiently and uniformly cared for.

- Apply the cotton gently to the face and slowly move the device by sliding it from the center of the face to the outer side.

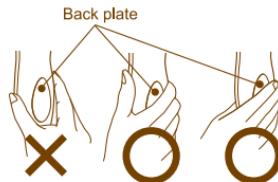

⚠ CAUTION

Do not keep the cotton on the same area of skin, but move it around.
(Cause of problems with your skin or poor health.)

- Add more skin lotion when there is no moisture in the cotton or when the device is difficult to slide.
- Do not apply the device on the same area of skin for more than 10 seconds.
- If you feel your skin tingling by micro current while using the device, press the High/Low switch button and switch to "Low."

If you still feel your skin tingling, use the device by adding more skin lotion.

- After 3 minutes have elapsed, the device will automatically shut off. (Auto shutoff function)
 - The finish sound (beep beep) will inform you.
- After use, make sure to pull out the power adaptor from the electric outlet and the main body.
 - To continue to use the next mode, do not disconnect the power adaptor.
- Remove the ring and the cotton.
 - Wipe off the surface of the heating head with a tissue.
 - Do not use the cotton again once it is used. It might cause problems with your skin.

Step 2 Hot Moisturize (P.15)

When using cotton


This mode cares for skin by allowing moisturizing ingredients of skin lotion to permeate the skin.

- Attach new cotton to the body with the attachment ring.
 - For attaching cotton, see Page 4.
- Saturate the cotton with your regular skin lotion.
 - Do not use milky lotion or a gel-like or thick skin lotion.
 - Saturate the cotton with lotion to the extent that lotion permeates the back of the cotton.
- After confirming that the power adaptor is connected to the main body, press the power switch.
 - "Low" on the level indicator lamp lights and "Hot Moisturize" on the mode indicator lamp starts flashing. If a lamp in another mode is flashing, press the mode switch button to switch to "Hot Moisturize."

When the "Hot Cleanse" mode is finished, press the power switch and the "Hot Moisturize" mode will automatically be set.

- Choose "the strength" of electrical potential with the Level switch button.

Switch the "strength" with the Level switch button according to the condition of your skin.

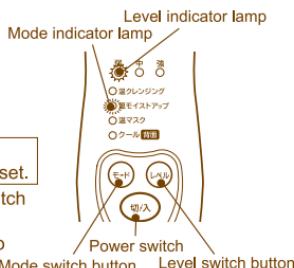

- Every time the level indicator button is pressed, the high, medium, and low of the electrical potential will be switched. There will be no change in vibration strength.

It is recommended that when using the device for the first time or if you feel some discomfort, use the device in "Low."

- 5 Hold the device with your hand touching the back plate of the body.

- Make sure to hold the body with your hand touching the back plate.

- 6 Apply cotton to the skin and move the device slowly.

- The mode indicator lamp will switch and turn on, and the device will start to vibrate.
- The time for use is within 3 minutes.

Cautions

Unless you apply the cotton to your skin while touching the back plate, the device will not vibrate.

(skin sensing function)

If the heating head is not vibrating, the device is not working.

If you leave the device as it is for 3 minutes without vibration, the device will automatically switch "Off."

(Automatic shutoff function)

Indicating timer function


Skin care time is indicated by the buzzer beeping about every 45 seconds as a guide.

[Example of skin care sequence]

Divide the area from your face to décolletage into four zones as shown in the illustration.

By moving the heating head in the order of ①②Both cheeks→③T-zone→④décolletage, the whole area can be efficiently and uniformly cared for.

- Apply the cotton gently to the face and slowly move the device by sliding it from the center of the face to the outer side.

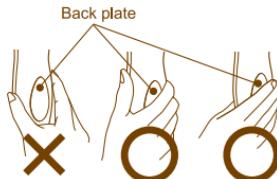

△CAUTION

Do not keep the cotton on the same area of skin, but move it around.
(Cause of problems with your skin or poor health.)

- Add more skin lotion when there is no moisture in the cotton or when the device is difficult to slide.
- Do not apply the device on the same area of skin for more than 10 seconds.
- If you feel your skin tingling by micro current while using the device, press the Level switch button and switch to "Low."

If you still feel your skin tingling, use the device by adding more skin lotion.

- 7 After 3 minutes have elapsed, the device will automatically shut off. (Auto shutoff function)
- The finish sound (beep beep) will inform you.

- 8 After use, make sure to pull out the power adaptor from the electric outlet and the main body.
- To continue to use the next mode, do not disconnect the power adaptor.

- 9 Remove the ring and the cotton.

- Wipe off the surface of the head with a tissue.
- Do not use the cotton again once it is used. It might cause problems with your skin.

When not using cotton


If you use a gel-like cosmetic (all-in-one type skin lotion for moisturizing) which is difficult to permeate the cotton or thick skin lotion in "Moisturize," you can use this device without attaching cotton to the body.

- 1 Apply a gel-like cosmetic or thick skin lotion that you would normally use onto the heating head and smoothen it over the entire head with your fingers.

- 2 After confirming that the power adaptor is connected to the main body, press the power switch.

- "Low" on the level indicator lamp lights and "Hot Moisturize" on the mode indicator lamp starts flashing. If a lamp in another mode is flashing, press the mode switch button to switch to "Hot Moisturize."

When the "Hot Cleanse" mode is finished, press the power switch and the "Hot Moisturize" mode will automatically be set.

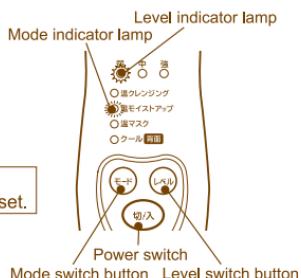

- 3 Choose "the strength" of electrical potential with the level switch button.
 Switch the "strength" with the Level switch button according to the condition of your skin.
 • Every time the level indicator button is pressed, the high, medium, and low of the electrical potential will be switched. There will be no change in vibration strength.

It is recommended that when using the device for the first time or if you feel some discomfort, use the device in "Low."

- 4 Hold the device with your hand touching the back plate of the body.

- Make sure to hold the body with your hand touching the back plate.

- 5 Apply the heating head directly to the skin and move it slowly.

- The mode indicator lamp will switch and turn on, and the device will start to vibrate.
- The time for use is within 3 minutes.

Cautions

Unless you apply the cotton to your skin while touching the back plate, the device will not vibrate.

(skin sensing function)

If the heating head is not vibrating, the device is not working.

If you leave the device as it is for 3 minutes without

vibration, the device will automatically switch "Off."

(Automatic shutoff function)

Indicating timer function

Skin care time is indicated by the buzzer beeping about every 45 seconds as a guide.


[Example of skin care sequence]

Divide the area from your face to décolletage into four zones as shown in the illustration.

By moving the heating head in the order of ①②Both cheeks→③T-zone→④décolletage, the whole area can be efficiently and uniformly cared for.

- Add more skin lotion or other cosmetics when the heating head does not easily slide.

- Apply the heating head gently to the face and slowly move the device by sliding it from the center of the face to the outer side.

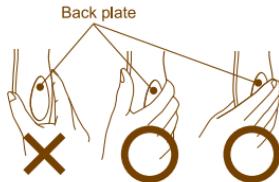

⚠ CAUTION

Do not keep the heating head in the same area of the skin, but move it around. (Cause of problems with your skin or poor health)

- Do not apply the device on the same area of skin for more than 10 seconds.
- If you feel your skin tingling by micro current while using the device, press the Level switch button and switch to "Low." If you still feel your skin tingling, use the device by adding more skin lotion or other cosmetics.

- 6 After 3 minutes have elapsed, the device will automatically shut off. (Auto shutoff function)

- The finish sound (beep beep) will inform you.

- 7 After use, make sure to pull out the power adaptor from the electric outlet and the main body.

- To continue to use the next mode, do not disconnect the power adaptor.

- 8 Wipe off the cosmetic on the heating head and the body of the device with a tissue.

Step 3 Hot Mask (P.20)

(It is recommended that you use "Mask" once a day for milky lotion or once or twice a week for sheet mask.)

Fine vibrations and gentle switching of the electrode enhance the effect of milky lotion or sheet mask.


- 1 Place a sheet mask on your face or spread milky lotion or cream that you would normally use over your entire face.

- Wipe off any cosmetic on your hands.

- 2 After confirming that the power adaptor is connected to the main body, press the power switch.

- "Low" on the mode indicator lamp lights and "Hot Mask" on the mode indicator lamp starts flashing. If a lamp in another mode is flashing, press the mode switch button to switch to "Hot Mask."

When the "Hot Moisturize" mode is finished, press the power switch and the "Hot Mask" mode will automatically be set.

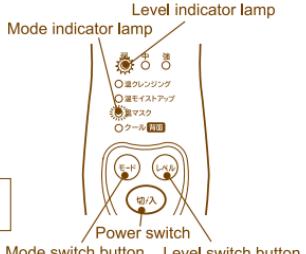

- Choose "the strength" of electrical potential with the level switch button.

Switch the "strength" with the Level switch button according to the condition of your skin.

- Every time the level indicator button is pressed, the high, medium, and low of the electrical potential will be switched. There will be no change in vibration strength.

It is recommended that when using the device for the first time or if you feel some discomfort, use the device in "Low."

- Hold the device with your hand touching the back plate of the body.

- Make sure to hold the body with your hand touching the back plate.

- Apply and move the heating head slowly.

When using a sheet mask, slide the head over the sheet mask.

- The mode indicator lamp will switch and turn on, and the device will start to vibrate.


- The time for use is within 3 minutes.

Cautions

Unless you apply the heating head to your skin while touching the back plate, the device will not vibrate. (skin sensing function)

If the heating head is not vibrating, the device is not working.

If you leave the device as it is for 3 minutes without vibration, the device will automatically switch "Off." (Automatic shutoff function)

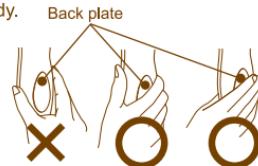

Indicating timer function

Skin care time is indicated by the buzzer beeping about every 45 seconds as a guide.

[Example of skin care sequence]

Divide the area from your face to décolletage into four zones as shown in the illustration.

By moving the heating head in the order of ①②Both cheeks→③T-zone→④décolletage, the whole area can be efficiently and uniformly cared for.

- Apply the heating head gently to the face and slowly move the device by sliding it from the center of the face to the outer side.

⚠ CAUTION

Do not keep the heating head in the same area of the skin, but move it around. (Cause of problems with your skin or poor health)

- Do not apply the device on the same area of skin for more than 10 seconds.
- If you feel your skin tingling by micro current while using the device, press the Level switch button and switch to "Low."

- After 5 minutes have elapsed, the device will automatically shut off. (Auto shutoff function)

- The finish sound (beep beep) will inform you.

- After use, make sure to pull out the power adaptor from the electric outlet and the main body.

- To continue to use the next mode, do not disconnect the power adaptor.

- Wipe off the cosmetic on the head and the body of the device with a tissue.

Step 4 Cool (P.22)

In this mode, the head surface that is cooled about 10°C below the ambient temperature tightens the pores of your face. The cool touch to the face is refreshing.

⚠ WARNING

Use this device at an ambient temperature from 10 to 40°C. (If you use "Cool" mode at low temperature, the head may be overcooled, damaging the skin.)


Caution

- Continuous use of the "Cool" mode makes it difficult to cool the cooling head. The warning sound (beep beep) and the flashing "Cool" on the mode indicator lamp will inform you.

- After confirming that the power adaptor is connected to the main body, press the power switch.

- The level indicator lamp will go out, and "Cool" on the mode indicator lamp starts flashing. If a lamp in another mode is flashing, press the mode switch button to switch to "Cool."

When the " Hot Mask " mode is finished, press the power switch and the " Cool " mode will automatically be set.

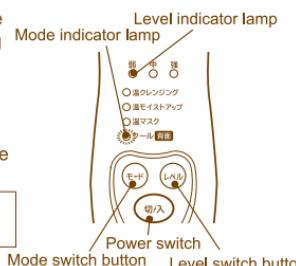

2 Wait until the cooling head has cooled.

- Preparation for cooling takes about 10 seconds. "Cool" on the mode indicator lamp flashes during preparation.
- When the device is ready for use, the ready sound will beep, and the mode indicator lamp will be turned on.

Caution

The device does not vibrate in "Cool" mode.

3 Apply the cooling head gently to your skin and move it slowly just like patting your face.

- The mode indicator lamp will change to lighting from flashing. The cooling head does not vibrate.
- The time for use is within one minute and 50 seconds.
- Since you can apply the device to the same area of your skin for only one second, repeatedly apply the head to your skin on and off towards the edges of the face.



Caution

- Do not slide the head over the skin.
- Do not keep the head in the same area of the skin, but move it around. The cooling effect of the cooling head may be lessened.

4 After one minute and 50 seconds have elapsed, the device will be automatically shut off. (Automatic shutoff function)

- The finish sound (beep beep) will inform you.
- When the "Cool" mode is finished, the main body and the cooling head become slightly hot, however this is not unusual.

5 After use, make sure to pull out the power adaptor from the electric outlet and the main body.

- If a cosmetic remaining on the skin attaches to the cooling head or the main body, wipe off the cosmetic with a tissue.
- The power adaptor may become slightly hot during use, however this is not a device failure.

Caution

If all of the mode indicator lamp and the level indicator lamp start flashing and the abnormality detection sound beeps during use, this is a warning of device failure.

Pull out the power adaptor from the electric outlet, and contact the distributor for repair.

About skin sensing function (P.24)

- This device is a product which operates through the human body.

Applying the skin to the side plate and the head will make an electrical circuit start to operate. Unless you touch the side plate and apply the head to the skin, it will not start to operate.

Care for main body (P.26)

- Wipe off the cosmetic on the head and the body with a tissue.

When dirt is difficult to remove, wipe it off with a cloth after saturating it with water and wring it thoroughly.

⚠ WARNING	Do not clean the main body with water. Or do not dip in water, and do not pour water. (Cause of failure)
⚠ CAUTION	Make sure to pull out the power adaptor from the electric outlet. (Improperly turning on the switch may give a tingling sensation or result in malfunction or short-circuit.)

Cautions : Do not use alcohol, benzene or thinner. (Cause of deformation or discoloration)

How to preserve (P.26)

- Store the device on the included stand in a place free from excessive humidity or dirt.
- The stand can store the rings in it as well as put the body on it.

⚠ WARNING	Do not leave in a water splashing area or an area with significant humidity, such as a bath. (Cause of short-circuits or failure)
	Do not wind the power cord around the power adaptor or the main body. (Cause of damage to cord)

Cautions

Do not leave in an area subject to direct sunlight (inside of a vehicle in summer, etc.) or near heaters. (Cause of deformation or discoloration)

日立交流式保湿サポート器保証書

持込修理

保証期間内に取扱説明書などの注意書きにしたがった正常なご使用状態で故障した場合には、本書記載内容にもとづきお買い上げの販売店が無料修理いたします。

お買い上げの日から下記の期間内に故障した場合には、商品と本書をお持ちいただき、お買い上げの販売店に修理をご依頼ください。

※型式	保証期間	本体：1年
※お買い上げ日	平成 年 月 日	
※お客様	お名前	様
	ご住所	〒 電話 ()
※販売店	住 所 店 名	〒 電話 ()

※印欄に記入のない場合は無効となりますから必ずご確認ください。

1. 保証期間内でも次のような場合には有料修理となります。
(イ) 使用上の誤り、または改造や不当な修理による故障または損傷。
(ロ) お買い上げ後の落下、引っ越し、輸送などによる故障または損傷。
(ハ) 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障または損傷。
(ニ) 車両、船舶にこう載して使用された場合に生じた故障または損傷。
(ホ) 業務用など一般家庭以外で使用されて生じた故障または損傷。
(ヘ) 本書のご提示がない場合。
(ト) 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合あるいは字句を書き換えられた場合。
 2. この商品は持込修理の対象商品です。郵送などで修理依頼された場合の送料などはお客様の負担となります。また、出張修理をご希望の場合には、出張に要する実費を申し受けます。
 3. ご転居の場合は事前にお買い上げの販売店にご相談ください。
 4. 贈答品などで本書に記入してあるお買い上げの販売店に修理をご依頼になれない場合には、取扱説明書に記載の「お客様ご相談窓口」にご相談ください。
 5. 本書は再発行いたしませんので紛失しないよう大切に保存してください。
 6. 本書は日本国内においてのみ有効です。Effective only in Japan
- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。したがってこの保証書によって保証書を発行している者(保証責任者)、およびそれ以外の事業者に対するお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明の場合は、お買い上げの販売店または取扱説明書に記載の「お客様ご相談窓口」にお問い合わせください。
- お客様にご記入いただいた保証書の写しは、保証期間内のサービス活動およびその後の安全点検活動のために記載内容を利用させて頂く場合がございますので、ご了承ください。
- 保証期間経過後の修理、補修用性能部品の保有期間にについて詳しくは、取扱説明書をご覧ください。

修理メモ

◎日立コンシューマ・マーケティング株式会社 リビングサプライ社

〒162-0814 東京都新宿区新小川町6-29 アクロポリス東京

電話 お客様相談センター 0120-3121-11