

取扱説明書

HITACHI

保証書つき(裏表紙が保証書になっています。)

日立ヘアブロッサ-

DR-795DU形

一般家庭用





もくじ

- お買い上げありがとうございます。
- この「取扱説明書」をよくお読みになり、正しくご使用ください。
- お読みになった後は、大切に保存してください。












安全上のご注意	1~3
特長	4
各部の名称とはたらき	5~6
使いかた	7
上手なセットのしかた	8~9
「故障かな?」と思ったときは	10
仕様	10
保証とアフターサービス	11

安全上のご注意





- ここに示した注意事項は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や損害を未然に防止するためのものです。
- 注意事項は次のように区分しています。
いずれも安全に関する重要な内容ですので、必ず守ってください。

 警告	誤った取り扱いをすると 人が死亡または重傷を負う可能性が想定される内容。
 注意	誤った取り扱いをすると 人が傷害を負う可能性および物的損害のみの発生が 想定される内容。




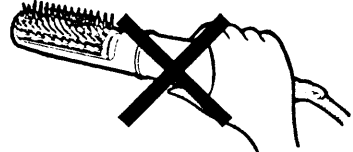
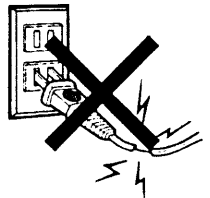




〈絵表示の例〉

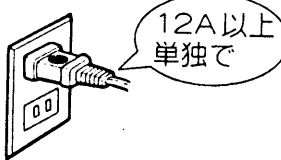	△記号は、 警告・注意 を促す内容を示す。 図の中に具体的な注意内容が描かれています。	 「一般的な注意」  「発火注意」
	⊘記号は、 禁止 の行為であることを示す。 図の中に具体的な禁止内容が描かれています。	 「分解禁止」  「接触禁止」  「水場での使用禁止」  「水ぬれ禁止」
	●記号は、行為を 強制 や 指示 する内容を示す。 図の中に具体的な指示内容が描かれています。	 「一般的な行為」  「電源プラグをコンセントから抜く」

- お読みになった後は、お使いになる方がいつでも見られるところに必ず保存してください。


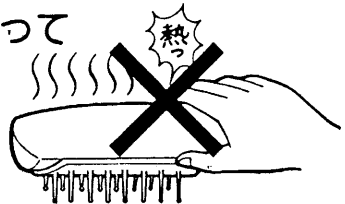
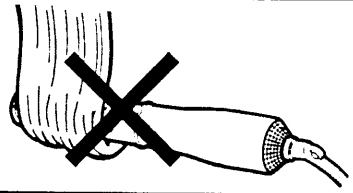


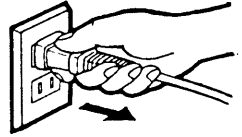


 警告	
	定格12A以上のコンセントを単独で使う。 (他の器具と併用すると分岐コンセント部の 異常発熱による発火の原因) 
	交流100-120V, 200-240V以外の地域では使用しない。 (発火・やけどの原因になります) <ul style="list-style-type: none"> ●付属の“海外使用のてびき”を参考に、使用するコンセントとプラグの形状を確認する。

⚠ 警告

	<p>水につけたり、浴室内やぬれた手で 使用しない。 (ショート・感電の原因)</p>	
	<p>引火性のもの(ガソリン・ベンジン・シンナーなど)の近くで使用 しない。 (爆発・火災の原因)</p>	
	<p>子供だけで使わせたり、幼児の手の届くところで使わない。 (感電・やけど・けがの原因)</p>	
	<p>吸込口や吹出口をふさいだり、 ヘアピンなどの異物を入れない。 (火災・感電の原因)</p>	
	<p>電源コードや電源プラグが傷んだり、 コンセントの差し込みがゆるいときは 使用しない。 (感電・ショート・発火の原因)</p>	
	<p>電源コードを傷つけたり、加工したり、無理に曲げたり、 引っ張ったり、本体に巻きつけたりしない。 (火災・感電・やけどの原因)</p>	
	<p>温風が出たり、出なかつたりしたときは使用を中止する。 (電源コードが内部断線していることがあり、火災・感電・やけどの原因)</p>	
	<p>使用後は必ずスイッチを「OFF」にして、 電源プラグをコンセントから抜く。 (火災・事故の原因)</p>	
	<p>改造はしない。また修理技術者以外の方は、分解したり 修理をしない。 (火災・感電・けがの原因)</p>	

安全上のご注意

⚠️ 注意

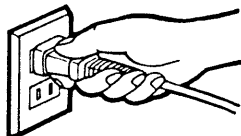	<p>使用中や使用直後のアタッチメントは熱くなっていますので、手を触れない。 (やけどの原因)</p>	
	<p>アタッチメントに毛髪を巻き過ぎない。 (発火・髪こげの原因)</p>	
	<p>通電したまま放置しない。 (火災の原因)</p>	
	<p>毛髪の乾燥、整髪以外の使用、乳幼児への使用は避ける。 (火災・やけどの原因)</p>	
	<p>子供の手の届くところに置かない。 (火災・事故の原因)</p>	
	<p>落としたり、ぶついたりしない。 (感電・発火の原因)</p>	
	<p>水のかかるところや、湿気の多いところに放置しない。 (絶縁劣化による感電の原因)</p>	
	<p>使用中、髪が吸込口に吸い込まれないように注意。 (やけど・故障の原因)</p>	
	<p>ご使用の際は必ずアタッチメントを取りつける。 (やけど・髪こげの原因)</p>	
	<p>電源プラグを抜くときは、電源コードを持たずに、必ず電源プラグを持って抜く。 (感電・ショート・発火の原因)</p>	

- 吸込口や吹出口にホコリなどを付着させたまま使用しない。
(温風の温度が高くなり過ぎたり、故障の原因)

特 長

■ 国内・海外両用タイプ。

交流100-120V, 200-240Vの地域で使用できます。

■ 手にぴったりの細形ボディ。

握りやすく、使いやすいスリムタイプです。

■ 髪にやさしいヘアケアポジション

髪の傷みを気にしている人におすすめします。

やわらか温風で髪の乾きすぎを防ぎます。



■ クール機能つき。

セットの固定や冷風乾燥に便利です。

■ クッションブローブラシの採用。


ブラシのクッション性がキューティクルや地肌にかかるブラッシング力を柔らげます。また、シリコン配合先玉ブラシが地肌への刺激を柔らげるとともに、静電気の発生を押さえ、枝毛防止。

シリコン配合先玉ブラシ



静電気・枝毛防止

■ 収納、携帯に便利なポーチつき。

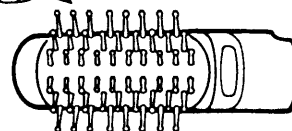

各部の名称とはたらき

プッシュボタン

アタッチメントの着脱に使用します。


■取り付け

プッシュボタンの位置にアタッチメントの凹部を合わせて差し込みます。

■取りはずし

プッシュボタンの中央を真上から押してアタッチメントを引き抜きます。

① 電圧切替つまみ

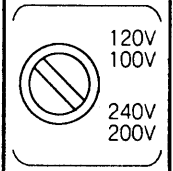

△ 注意

ご使用前に必ず電圧を確かめてください。

④ スイッチ

DRY

高めの温度で、タオルドライ後のスピード乾燥やブローセットに。髪の量の多い所や髪の長い方のスタイリングに。

HAIR CARE

低めの温度で、髪が傷んでいると感じられるときのドライや、乾燥した髪のブローセットに。

COOL


セット後の固定や、冷風乾燥に。

表示	温風温度 (周囲温度30℃)
DRY	約95℃
HAIR CARE	約60℃
COOL	冷風
OFF	-

(電源電圧が100Vのとき)

アタッチメント


② クッションブローブラシ

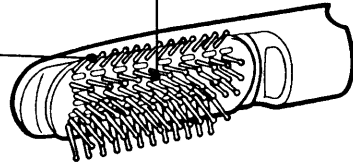

ヘアキーパー



ヘアキーパーが髪をしっかり捕らえてくせつけ性を高めます。

ヘアキーパー

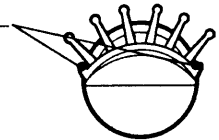

付属品

③ ポーチ

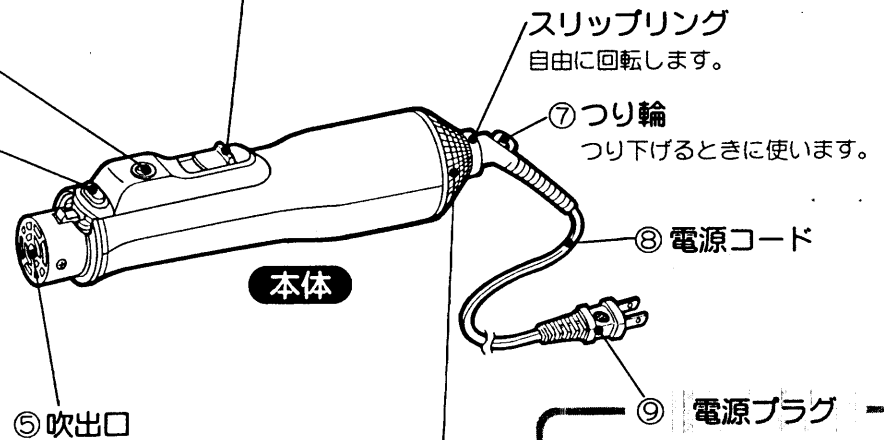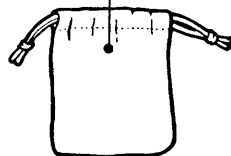

本体

スリップリング


自由に回転します。

⑦ つり輪

つり下げるときに使用します。

⑨ 電源プラグ

- 使用後は必ずコンセントから抜く。(火災・事故の原因)
- 抜くときは、必ず電源プラグを持って抜く。(感電・ショート・発火の原因)

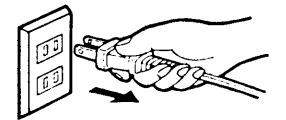


⑥ 吸込口(フィルター付)

ホコリが付いている場合は、歯ブラシなどで取り除いてから使用してください。

使いかた

- 交流100-120Vおよび200-240Vの地域で使用できます。
使用前に電源コンセントの電圧と種類を確認して、正しくお使いください。
- このヘアーブロッカーはあらかじめ「200-240V」にセットされています。

1 スイッチを「OFF」にして、使用する国の電圧に 電圧切替つまみを合わせ、プラグを選ぶ。

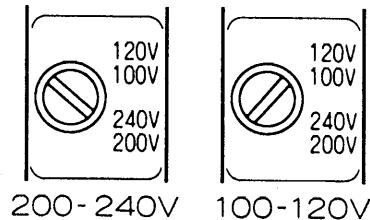


注意

電圧切替つまみを「100-120V」に合わせたまま、
「200-240V」の電源電圧で使用しない。(故障の原因)

- 使用する国の電圧とプラグ形状が不明の場合は、
付属の「海外使用のてびき」を参考にしてください。

2 電源プラグをコンセントに根元まで差し込む。

- ホテルなどのシェーバー専用コンセント(電力を
低ワットに制御したコンセント)では、使用でき
ません。別のコンセントでご使用ください。

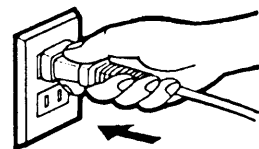

注意

ご使用の際は必ずアタッチメントを取りつける。(やけど・故障の原因)

- テレビやラジオの近くのコンセントで使用すると、テレビやラジオに雑音が入ることがあります。そのようなときは、離れた別のコンセントでご使用ください。

上手なセットのしかた


つづく

ご使用前に

シャンプーしたときは水分をとる。

タオルドライ

- 水分が多いとセットに時間がかかります。

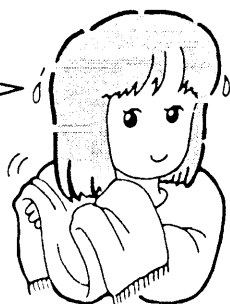

髪がかわいているときは湿らす。


蒸しタオルやセットローションで湿らせる。

- セットしやすくなります。




自分の髪質やヘアースタイルに合ったセット剤を使う。

- いろいろなセット剤が市販されています。上手に選んで活用しましょう。

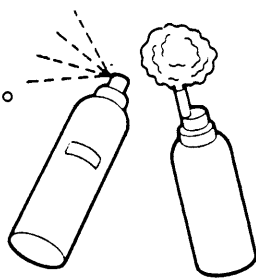

毛たばをあらかじめ分けておく。

- 毛たばは、ブラシに巻ける8分目ぐらいが適当です。

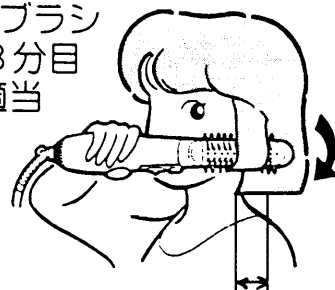

8分目ぐらい

髪をブラッシングして整える。

抜け毛や毛先のもつれをとっておくとセットがしやすくなります。また、抜け毛の吸い込みによる故障防止にもなります。

セットのポイント

1カ所の時間は約10～20秒。

1カ所のくせづけは、約10～20秒が適当です。長くても1分以内にしてください。

注意

1カ所に温風を当て過ぎない。
(髪を傷める原因)


冷風で固定する。

温風でセット後、ブラシをはずさずに冷風を10～15秒ぐらい当てますと、セットが固定されます。

- セット用スプレーなどを使うと、形がくずれにくくセットが長持ちします。


上手なセットのしかた

クッションブローブラシ

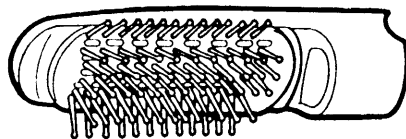

大きく内巻きにしたいとき

毛たばを分けとり、ブラシを内側に入れて、手首を回転させるようにしながら、内側にまわします。

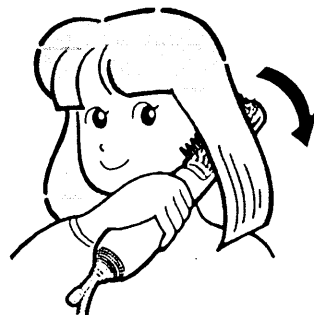

大きく外巻きにしたいとき

ブラシを返すようにして後ろに持っていきます。

- ショートヘアーの場合は、毛を流したい方向にブラッシングするだけで、きれいな流れができます。



注意

- アタッチメントの高温に注意。(やけどの原因)
- アタッチメントに毛髪を巻き過ぎない。(発火・髪こげの原因)
- アタッチメントに整髪料をつけたり、洗髪用具として使用しない。(やけど・故障の原因)

使用した後は

- 使用後は、必ずスイッチを「OFF」にして電源プラグをコンセントから抜きます。
- 本体が冷めてから収納します。
スイッチを数秒間「COOL」にしてから、「OFF」にしますと、早く冷えます。

注意

子供の手の届くところには置かない。(火災・事故の原因)

本体やアタッチメントの汚れは

中性洗剤液を含ませて固く絞った布でふき取り、ブラシに付着した汚れは、歯ブラシなどで取り除きます。

注意

ベンジンシンナーなどは使用しない。(変形・変色の原因)

「故障かな?」と思ったときは

修理を依頼される前に、次のことをお調べください。

症 状	点 検
「温風」状態で使用中に たびたび冷風になる。 または、異常に熱い。	<ul style="list-style-type: none">●吹出口や吸込口にゴミが付着して目づまりしていませんか。●セットするとき、吸込口を毛髪や手などでふさぐような使いかたをしていませんか。
風が全く出ない。または 出たり出なかったりする。	<ul style="list-style-type: none">●電源プラグはコンセントにしっかり入っていますか。点検後も異常がある場合は、電源コードが内部断線していることが考えられますので、使用を中止してください。火災・感電・やけどの原因。
使用中に、異常な音が したり、本体の内部が 真っ赤になる。	<ul style="list-style-type: none">●ただちに使用を中止してください。

以上のことをお調べになり、それでも具合が悪い場合は、ご自分で修理なさないで、お買い上げの販売店にご相談ください。

仕 様

電 源	AC100・200V/120・240V 50-60Hz 共用
消 費 電 力	350W/500W
温 風 温 度	95℃/110℃ (周囲温度30℃)
質 量	340g (クッションブローブラシつき)
電 源 コ ー ド	1.8m
ア タ ッ チ メ ン ト	クッションブローブラシ
付 属 品	ポーチ

保証とアフターサービス (必ずお読みください)

この商品の保証とアフターサービスについては、日本国内においてのみ適用します。

保証書(一体)

- この商品は保証書つきです。
- 保証書は、必ず「お買い上げ日」・「販売店名」などの記入をお確かめの上、販売店から受け取っていたとき、内容をよくお読みの後、大切に保存してください。

保証期間

お買い上げの日から 1 年間

補修用性能部品の最低保有期間

- 当社は、このヘアブロッサの補修用性能部品を、製造打切後最低6年間保有しています。
- 補修用性能部品とは、その商品の機能を維持するために必要な部品です。

ご不明な点や修理に関するご相談は

- 修理に関するご相談並びにご不明な点は、お買い上げの販売店または別紙の「日立家電品ご相談窓口一覧表」の窓口にお問い合わせください。

修理を依頼されるときは

持込修理

10ページに従って調べていただき、なお異常のあるときは、使用を中止し、必ず電源プラグを抜いてから、お買い上げの販売店にご相談ください。

■ 保証期間中は

修理に際しましては、保証書をご提示ください。
保証書の規定に従って、販売店が修理させていただきます。

■ 保証期間が過ぎているときは

修理すれば使用できる場合には、ご希望により有料で修理させていただきます。

愛情点検



●長年ご使用のヘアブロッサの点検を!

こんな症状はありませんか。

- 電源コードや電源プラグが異常に熱くなる。
- 風が出たり出なかったりする。
- 本体が変形していたり、こげくさい臭いがする。
- その他の異常・故障がある。



お
願
い

故障や事故防止のため、スイッチを「OFF」にし、電源プラグをコンセントから抜いて、必ず販売店にご相談ください。

株式会社 日立製作所



〒105-8430 東京都港区西新橋2-15-12
電話 (03) 3502-2111

九州日立マクセル株式会社















〒822-1296 福岡県田川郡方城町大字伊方4680
電話 (0947) 22-0585

This product is guaranteed and provided with after-sales service only in Japan.








Safety precautions (P.1~3)

- The precautions shown herein are to help you use this product safely and correctly, so that neither you nor anyone else suffers personal injury or damage to personal property. Always follow these rules, please.
 - The safety precautions have been marked with a number of different symbols; please learn the meaning of these symbols before reading the precautions.
-  **WARNING:** Ignoring this warning could lead to improper use of the product, and result in severe personal injury, or even death.
-  **CAUTION:** Ignoring this warning could lead to improper use of the product, and result in personal injury, or in damage to the personal property.


Key to symbols

-  The () symbol is used to indicate warnings and cautions. The pictograph inside the symbol provides a concrete description of the contents of the message.
- () denotes general safety precautions. () denotes the potential for a fire to break out.
-  The () symbol is used to indicate prohibitions. The pictograph inside the symbol provides a concrete description of the contents of the message.
- () means 'Do not disassemble'. () means 'Do not touch'. () means 'Do not wet'.
() means 'Do not use in the bath, or other areas subject to inundation'.
-  The () symbol is used to indicate requirements and directions. The pictograph inside the symbol provides a concrete description of the contents of the message.
- () denotes general procedures. () means 'Remove electrical plug from outlet'.
- After reading this manual, please keep it somewhere it can be referred to at any time by the person using the unit.

WARNING

-  Use a sole consent rated at 12A or more for the power supply. If used together with other equipment, the consent junction section may become abnormally hot and result in fires.
-  Use only in areas with 100 to 120V, 200 to 240V of alternating current. Use in other areas could result in burns or fires. Referring to the attached " A guide for use abroad " handbook, check the shape of the plug and of the outlet you will be using.
-  Do not immerse in water, nor touch with wet hands. Do not use in the bath. Do not leave in places subject to high humidity. Could result in short circuits, electric shock, or damage to unit.
-  Do not use near flammable materials such as gasoline, benzene or paint thinner. Could result in explosions or fires. Do not children to use the product on their own and do not use the product in place which can be reached by infants. Could result in burns, electric shocks or injuries. Do not cover the inlet or outlet, or insert foreign matter like pins etc. Could result in electric shock, burns or fires. Do not use with worn or damaged electrical plugs and cords, nor in a loose outlet. Could result in electrical shock, short circuits or fires. Do not damage the electrical cord, process it, excessively twist it, pull it, or wrap it around the main body. Could result in electrical shock, burns or fires.
-  Do not use the hair dryer when hot air uncontrollably fluctuates on and off. The electrical cord inside may have been broken. Could result in fires, electric shocks, or burns.
-  Always remove the electrical plug from the outlet after use. Could result in fires or accidents.
-  Do not reconfigure. Do not disassemble or repair unless you are a qualified technician. Could result in electrical shock, fires or injury.

CAUTION

-  Since the cushion blow brush is hot during and immediately after use, do not touch it with your hands. Could result in burns.

- ⊘ Do not wind too much hair around the attachment. Could result in fires or hair singe.
Do not leave plugged in. (with electricity on) Could result in fires.
Do not use for purposes other than drying or dressing hair, and do not use on infants. Could result in burns, fires or accidents.
Keep out of reach of children. Could result in fires or accidents.
Do not drop or hit the unit. Could result in electrical shock or fires.
- ⊘ Do not leave the hair styler in a place where the humidity is high or where water splashes.
Could result in electric shocks.
- ! Pay attention so that your hair does not get entangled in the inlet during drying. Could result in burns or accidents.
Be sure to mount the attachment whenever using the hair styler. Could result in burns or hair singe.
Hold the electric plug, not the electric cord when removing the electrical plug. Could result in electric shock, shorts or fires.

- Do not use when dust etc is attached to the inlet or outlet.

Part names and functions (P.5~6)

- ① Voltage selector ② Cushion blow brush ③ Carrying pouch ④ Switch ⑤ Air outlet ⑥ Air inlet
⑦ Hanger ⑧ Electrical cord ⑨ Electrical plug

How to use (P.7)

- This hair styler can be used in the area of the voltage 100-120V and 200-240V. Before using, check the voltage and type of plug that is required for your location, and use correctly.
 - This styler has been set at the factory to operate at 200-240V.
1. Turn the switch to "OFF", set the voltage selection button to match the voltage of the country in which it is to be used and select a plug.
- Caution: Do not use with a "200-240V" power supply with the voltage selection button set to "100-120V". (Could result in malfunctions.)
- If the voltage and plug type of the country in which it is to be used are not clear, refer to the enclosed "A guide for use abroad".
2. Insert the plug into the base of the power outlet.
- Power outlet exclusively controlled for shaver at hotel, etc. (for low voltage) cannot be used for this styler. Use a different power outlet.

Various hair styling operation (P.8~10)

Before use

- Remove water when shampooing. If there is a lot of water, it will take a long time to set.
- Brushing and arranging the hair. It is easily to set, if loose or tangled hair is removed. This will prevent malfunction due to inhale of hair.
- Slightly dampen the hair. Slightly dampen the hair with water or set lotion. It becomes easier to set.
- Use dressing creams or oils which are suitable for your hair quality and style.
Since various kinds of dressing creams or oils are sold on the market, select it carefully.
- Divide your hair in advance.
The amount of one bundle of hair is about 80% of the one which can be wound around the brush.

Setting

Caution

- Do not drop or throw the hair dryer. (Could result in electric shocks or fires.)
- Be careful that the attachment is hot. (Could result in burns.)
- Do not wind too much hair around the attachment. (Could result in fires or hair singe.)
- Do not apply dressing oil or cream to the attachment or use it to wash your hair.
(Could result in burns or malfunctions.)
- If the hair dryer is used near a TV or radio, the TV or radio may make a noise. In such a case, use another socket which is far away from those for the TV and radio.

Cushion blow brush

When making loose inward curl : Put the brush inside your hair and rotate your wrist outward.

When making loose outward curl : Rotate your wrist inward and backward.

- If your hair is short, just brush it in the desired direction. Then you can get beautiful blow.

After use

- After using the hair styler, set the switch to COOL for a few seconds and then turn it off.
- If the body and attachment gets dirt, wipe it off with cloth impregnated with neutral detergent.

Caution: Do not use benzene or paint thinner, etc. (May result in discoloration or deformation)

日立ヘアブロッサ―保証書

持込修理

形 名	DR-795DU		保証期間	本体:1年
※お買い上げ日	平成 年 月 日			
※お 客 様	お名前	様		
	ご住所	〒 電話 ()		
※販 売 店	住 所 店 名	〒 電話 ()		


※印欄に記入のない場合は無効となりますから必ずご確認ください。

保証期間内に取扱説明書などの注意書きにしたがった正常なご使用状態で故障した場合には、本書記載内容にもとづきお買い上げの販売店が無料修理いたします。お買い上げの日から上記の期間内に故障した場合には、商品と本書をお持ちいただき、お買い上げの販売店に修理をご依頼ください。

- 保証期間内でも次のような場合には有料修理となります。
 - (イ) 使用上の誤り、または改造や不当な修理による故障または損傷。
 - (ロ) お買い上げ後の落下、引越し、輸送などによる故障または損傷。
 - (ハ) 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障または損傷。
 - (ニ) 車両、船舶にとう載して使用された場合に生じた故障または損傷。
 - (ホ) 業務用など家庭以外で使用されて生じた故障または損傷。
 - (ヘ) 本書のご提示がない場合。
 - (ト) 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合あるいは字句を書き換えられた場合。
- この商品について出張修理をご希望の場合には、出張に要する実費を申し受けます。
- ご転居の場合は事前にお買い上げの販売店にご相談ください。
- 贈答品などで本書に記入してあるお買い上げの販売店に修理をご依頼になれない場合には、日立家電品ご相談窓口にご相談ください。
- 本書は再発行いたしませんので紛失しないように大切に保存してください。

- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。したがってこの保証書によってお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明の場合は、お買い上げの販売店または日立家電品ご相談窓口にお問い合わせください。
- 保証期間経過後の修理、補修用性能部品の保有期間について詳しくは、取扱説明書をご覧ください。
- 本書は日本国内においてのみ有効です。 Effective only in Japan.

修理メモ

 株式会社 日立製作所

〒105-8430 東京都港区西新橋2-15-12 電話 (03) 3502-2111