

取扱説明書

保証書付き

裏表紙が保証書になっています。

HITACHI
Inspire the Next

家庭用

日立シェーバー


アールエム ティー

アールエム ダブリュー

型式 **RM-T348/RM-W248**

5時間充電・交流式両用

お買い上げありがとうございます。
この「取扱説明書」をよくお読み
になり正しくご使用ください。
お読みになった後は大切に保存
してください。

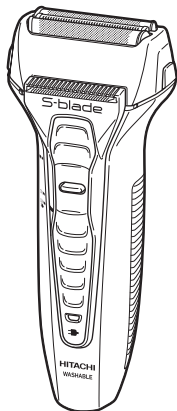

特長

- 本体水洗いの**3枚刃シェーバー**。
(2枚刃+センタートリマー)
(RM-T348のみ)
- 本体水洗いの**2枚刃シェーバー**。
(RM-W248のみ)
- 鋭角刃先の**ウェーブキャッチ刃**で
なめらかな深ぞりを実現。
- **センタートリマー**で
長ヒゲやくせヒゲをしっかりと捕ら
えます。(RM-T348のみ)
- **爽やかなウェットシェービング**。





4526044010103

目次

使用前の準備	3
• 充電のしかた	3
• 蓄電池の性能を十分発揮させるために	6
各部の名称と働き	7
安全上の注意	9
使用上の注意	14
使いかた	15
• 外刃でのそりかた	15
• 交流式での使いかた	18
• キワゾリ刃でのそりかた	19
お手入れ	20
• 水洗い	21
• ブラシでの掃除	24
外刃・内刃の取り替えかた	26
• 外刃の取り替えかた	26
• 内刃の取り替えかた	27
「故障かな」と思ったときは	28
お客様ご相談窓口	29
保証とアフターサービス	30
仕様	31
消耗部品・別売り部品	32
製品を廃棄するときのお願い	33
• ニッケル水素電池の取りはずしかた	34

充電のしかた

- 初めてご使用になる前に、充電してください。
- 電源は必ず交流100-240Vで、付属の電源アダプターをご使用ください。
- 充電推奨温度は10～35℃です。
推奨温度を下回る温度では、充電反応が鈍くなり、十分に充電されずに使用回数が少なくなる場合があります。
- 蓄電池には寿命があります。
(電池寿命は使用・保存状態により大きく変化します。)
取扱説明書に従ってご使用頂いても、使用回数が極端に少なくなった場合は、電池の寿命が考えられます。電池の交換はお買い上げの販売店または29ページのお客様ご相談窓口にご相談ください。

 警告	ぬれた手で電源アダプターをコンセントに抜き差ししない。(感電・けがの原因)
	電源アダプターは浴室など水のかかるところや、湿気の多いところでは使用しない。 (感電・ショートの原因)
 注意	本体は水滴を十分にふき取り、乾燥させて充電する。(ショート・発熱によるやけどの原因)

■海外でのご使用について

- この商品は交流100-240V電源でAプラグのコンセントが使用できます。
- 同一国内でも地域により電圧およびプラグ形状が異なる場合がありますので、現地で十分お確かめください。

使用前の準備

⚠ 注意


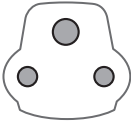






使用前に必ずコンセントの電圧を確かめる。
(火災・感電の原因)

交流240Vを超える電源で使用しない。
(火災・感電の原因)

- ・電圧およびプラグ形状については、現地のホテルや旅行社などにご相談ください。

■プラグアダプターの種類

- ・おもな種類(本品には付属していません。)

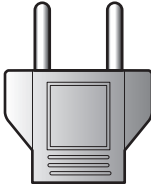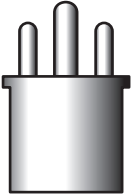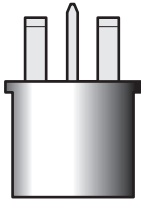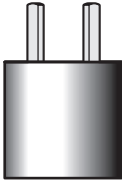Cタイプ	B3タイプ	BFタイプ	Oタイプ
			
			

- ・プラグアダプターは、使用される商品の消費電力に見合う容量のものをご使用ください。
- ・購入される場合は、空港などの免税店や現地のホテル・旅行社などにご相談ください。

- ・ Aプラグ地域では、プラグアダプターなしで使用できます。

1 スイッチを「OFF」にして電源アダプターを本体とコンセントに接続する。

注意

- スイッチが「ON」になっていると充電できません。



蓄電池が放電していますと充電ランプが点灯しない場合があります。そのまま充電を続けると充電ランプが点灯後に蓄電池への充電を開始します。

お願い

- 本体ソケットに水滴が付いている場合は、ふき取ってください。
- 充電中やご使用中、テレビなどに雑音が入る場合は、別のコンセントをご使用ください。

使用前の準備

2 充電完了後、電源アダプターをコンセントと本体から抜く。

- 充電中、電源アダプターと本体が少し熱くなることがありますが、異常ではありません。



- 標準充電時間は5時間です。
- 1回の充電で約7日間使用できます。
(1日3分間の使用で)


(ひげの濃さ、肌にあてる力、お手入れのしかた、周囲温度が低いなど使用条件によっては、使用回数が少なくなることがあります。)

蓄電池の性能を十分に発揮させるために

1. 使用の都度充電しないでください。電池の寿命が短くなります。
2. 3か月以上使用しなかった場合は、充電してからご使用ください。
3. シェーバーが動かなくなった場合でも、スイッチを「ON」にしたまま放置しないでください。
4. 周囲温度が10～35℃で充電してください。
5. 家庭用以外の電源での充電はしないでください。

各部の名称と働き

つづく

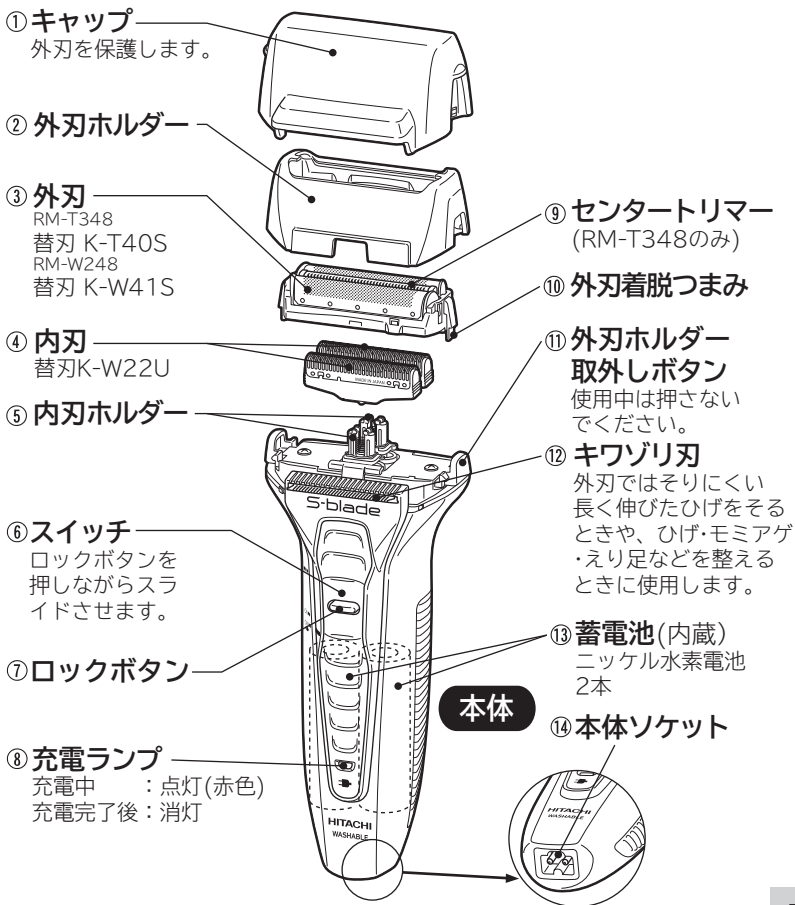

各部の名称と働き


電源アダプター

型式：KH-48

- ⑮ 電源プラグ
コンセントに根元まで
差し込みます。


- ⑯ 器具用プラグ

⑰ コード

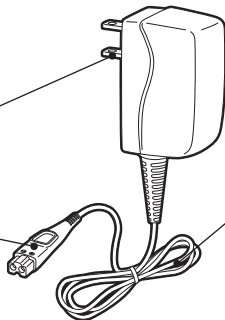




付属品






- ⑱ 掃除用ブラシ



- ここに示した注意事項は、製品を安全に正しくお使いいただき、あなたや周囲の方への危害や損害を未然に防止するためのものです。
- 注意事項は次のように区分しています。いずれも安全に関する重要な内容ですので、必ず守ってください。

 危険	取り扱いを誤った場合、使用者が死亡または重傷を負うことがあり、かつその切迫の度合いが高い危害の程度。
 警告	取り扱いを誤った場合、使用者が死亡または重傷を負うことが想定される危害の程度。
 注意	取り扱いを誤った場合、使用者が軽傷を負うことが想定されるか、または物的損害(家屋・家財など)の発生が想定される危害・損害の程度。

<絵表示の例>

	 記号は、「禁止」(しないでください)を示しています。	
	 「分解禁止」	 「水場での使用禁止」
	 「水ぬれ禁止」	

安全上の注意



● 記号は、「強制」(必ずしてください)を示しています。

● 「必ず守る」

● 「電源プラグをコンセントから抜く」

お読みになった後は、お使いになる方がいつでも見られるところに、必ず保存してください。

警告

交流100-240V以外の電源は使用しない。
(火災・感電の原因)

子供の手の届くところに置かない。
(事故やけがの原因)

電源コードや電源プラグが傷んだり、コンセントの差し込みがゆるいときは使用しない。
(感電・ショート・発火の原因)

電源プラグや器具用プラグにピンやゴミを付着させない。(感電・ショート・発火の原因)

電源コードを傷つけたり、無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、はさみ込んだり、加工したり、電源アダプターなどに巻きつけたりしない。
(電源コードが損傷し、火災・感電の原因)



禁止


警告


水ぬれ禁止

電源アダプターは絶対に水洗いしない。
また、水につけたり、水をかけたりしない。
(感電・ショートの原因)

交流式で使用する場合は、石けんぞりや水洗いを
しない。(感電・ショートの原因)

水場での
使用禁止

電源アダプターは、浴室など水のかかるところや、
湿気の多いところでは使用しない。
(感電・ショートの原因)

電源プラグ
を抜く

お手入れの際は必ず電源アダプターを本体とコン
セントから抜く。また、ぬれた手で電源プラグをコ
ンセントに抜き差ししない。(感電・けがの原因)



分解禁止

改造はしない。また、修理技術者以外の方は、
修理しない。(火災・感電・けがの原因)
・修理は販売店にご相談ください。

安全上の注意

注意

ご使用前に外刃の破れや変形がないか確認する。
(肌を傷つける原因)

外刃は使用するたびに徐々に磨耗し、使用中に破損して肌を傷つけることがあります。
早めに別売りの替刃と交換してください。

器具用プラグを抜くときは、コードを持たずに必ずプラグ部分を持って抜く。
(感電・ショート・発火の原因)

電源プラグや器具用プラグにほこりが付着しないよう定期的に掃除する。(感電・ショート・発火の原因)

本体は水滴を十分にふき取り、乾燥させて充電する。
(ショート・発熱によるやけどの原因)

肌に吹出物や傷などがある場合は、ご使用時に注意する。(肌を傷つける原因)

使用後は、湿気の少ないところに保存する。(浴室などに放置すると本体内部で結露やさびが発生して、機器の故障の原因)

使用後は必ずキャップを取りつける。
(外刃の破損や変形により肌を傷つける原因)



必ず守る

⚠ 注意

ひげそり専用です。ひげそり以外の目的(頭髪など)には使用しない。

(肌を傷つけたり機器の寿命を早めたりする原因)

家族や他人との共用はしない。(感染や炎症の原因)

外刃は強く押さえない。

(特に唇など肌を傷つけたり破損の原因)

内刃の刃先を素手で触れない。(指を傷つける原因)

外刃をはずした状態(内刃のみ)でそらない。

(肌を傷つける原因)



禁止

外刃の一部だけでそったり、使用中に指や爪を外刃にあてない。(外刃が破損して肌を傷つける原因)

お手入れ時、外刃の網刃には掃除用ブラシをあてない。(外刃が破損して肌を傷つける原因)

付属の電源アダプター以外は使用しない。また、付属の電源アダプターで他の商品を充電しない。(ショート・異常発熱による発火の原因)

耳や鼻に直接キワゾリ刃を当てない。

(耳や鼻を傷つける原因)



電源プラグを抜く

使用時以外は、電源プラグをコンセントから抜く。(けが・やけど、絶縁劣化による感電・漏電火災の原因)

使用上の注意


- クリーム状やジェル状のシェービング剤は使用しないでください。
(刃の目づまりや故障の原因)
- 水中につけ置きしないでください。
(機器が故障する原因)
- ドライヤーやファンヒーターなどで乾燥しないでください。
(変形や機器が故障する原因)
- 使用の都度充電しないでください。
(蓄電池の性能を損なう原因)
- 直射日光の当たる所や高温になる所に放置したり乾燥させたりしないでください。
(変形や防水ゴムの劣化により機器が故障する原因)
- 本体や電源アダプターをアルコール、ベンジン、シンナーなどでふかないでください。
(変形や変色の原因)

- 初めてお使いの場合は、軽く肌に当て少しずつ試しながらそってください。


外刃でのそりかた

⚠ 注意	使用前に外刃の破れや変形がないか確認する。 (肌を傷つける原因)
	肌に強く押しつけない。 (特に唇など肌を傷つけたり、外刃破損の原因)
	外刃の一部だけでそったり、使用中に指や爪を外刃にあてない。(外刃が破損して肌を傷つける原因)
	肌に吹き出物や傷がある場合は、使用時に注意する。(肌を傷つける原因)

- 1 キャップをはずし、ロックボタンを押しながらスイッチを「ON」にする。

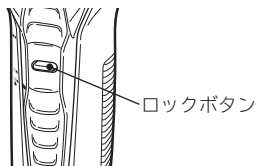

- 2 ひげの流れに逆らって矢印方向に軽く滑らせるようにそる。

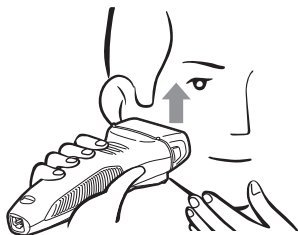

使いかた

じょうずなそりかた

- (1) 肌を手で伸ばしてひげを起こす。
 - (2) 外刃全体を肌に軽くあてる。
 - (3) 軽く当ててゆっくりとひげの流れに逆らって滑らせるようにそる。
- 外刃でそりにくい長く伸びたひげをそるときは
キワゾリ刃で長く伸びたひげを短くして、外刃で仕上げます。

使用推奨温度は10～35℃です。

推奨温度を下回る低温下で使用・保存されますと、動作しなかったり使用回数が少なくなる場合があります。

3 使用後は、スイッチを「OFF」にして、キャップをかぶせる。

■ 石けんぞり(シェービングフォーム)もできます



交流式では石けんぞりはしない。
(ショートの原因)


肌に強く押しつけない。(特に唇など肌を傷つけたり、外刃破損の原因)

- 市販のシェービングフォーム(泡状のもの)を使用すると、肌のすべりもよく、より深ぞりできます。

注意

クリーム状やジェル状のシェービング剤は使用しない。
(刃の目詰まりや故障の原因)

- 1 よく泡だてて顔につける。
- 2 ドライ（シェービングフォームを使わない）でそるときよりも、さらに軽く肌に当てて、ゆっくりとひげの流れに逆らって滑らせるようにする。

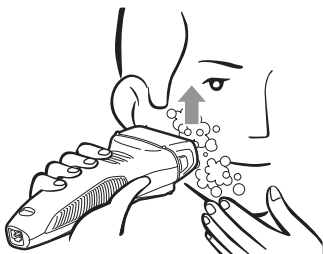

シェービングフォームが乾くと、滑りが悪くなりますので適量追加してください。

- 3 使用後は、必ず水洗いして石けん成分を洗い流す。
水洗いのしかたは「お手入れ」の21～23ページを参照してください。


石けん成分が残っていると、固まって内刃が動かなくなるなど機器の故障につながり、切れ味の低下・使用回数減少などの原因になります。

- 4 お手入れ後は、湿気の少ないところに保存する。

浴室などに放置しますと、本体内部で結露やさびが発生して機器の故障の原因になります。

使いかた

交流式での使いかた

 警告	電源アダプターは浴室など水のかかるところや、 湿気の多いところでは使用しない。 (感電・ショートの原因)
	石けんぞりや水洗いをしない。 (感電・ショートの原因)

- 1 電源アダプターを本体とコンセントに接続して、
スイッチを「ON」にする。
 - 蓄電池が完全に放電していますと、起動しにくいときがあります。そのようなときは、スイッチを「OFF」にすると充電しますので、約1分間充電してからご使用ください。
- 2 15～16ページの「外刃でのそりかた」に従い使用する。
- 3 使用後は、スイッチを「OFF」にして、電源アダプターをコンセントと本体から抜く。


お知らせ

交流式として使用される場合も蓄電池は消耗しますので1か月に1回は充電してください。

キワゾリ刃でのそりかた

刃先に毛が一気に入り込みますと、毛が引っぱられたり噛み込みが発生して切れ味低下の原因になります。

- モミアゲなどのキワをそろえるときに使います。


1 キャップを前後逆向きに
取り付け、ロックボタン
を押しながらスイッチを
上にスライドさせて「」
にする。

- キャップはつけたままで
使用します。
(外刃に髪が入る恐れあり)

キャップを
前後逆向きに
取り付ける

スイッチを
押し上げる


ロックボタン

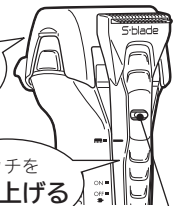

2 キワゾリ刃を直角に軽くあ
てて、矢印方向にゆっくり
そる。



 注意

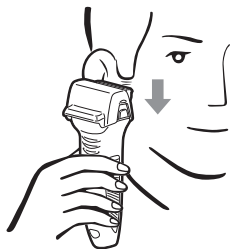刃先は強く押しついたり、
横に滑らせない。
(肌を傷つける原因)



3 使用後は、スイッチを「OFF」にして、キワゾリ刃を
収納しキャップを元の向きにかぶせる。

お手入れ

 警告	電源アダプターは絶対に水洗いしない。 また、水につけたり、水をかけたりしない。 (感電・ショート・発火の原因)
	お手入れの際は、必ず電源プラグをコンセントから抜く。(感電・けがの原因)
 注意	交流式では水洗いしない。(ショートの原因)
	外刃は強く押さえない。 (破損して指を傷つける原因)

■快適な切れ味を保つために

- 2日～3日に1回はお手入れ(水洗いまたはブラシ掃除)してください。
毛くずがたまると、切れ味が悪くなったり毛くずが飛び散る原因になります。
- 水洗いの場合はその都度、ブラシ掃除の場合は週に一度、外刃に別売の潤滑剤(シェーバークリーナー)を吹きつけてください。
 - 内刃の動きを滑らかにします。
 - 使用回数の減少を防ぎます。
 - 切れ味を保ちます。
 - 刃の発熱を抑えます。
 - 刃の磨耗を防ぎます。

別売の潤滑剤(シェーバークリーナー-SC-51H)をお買い求めください。

水洗い


- 外刃、内刃および本体は水洗いができます。

水洗いだけでは、内刃にこびりついた毛くずが取れない場合がありますので、時々掃除用ブラシで取り除いてください。

1 スイッチを「OFF」にして 外刃ホルダーをははずす。

外刃ホルダー取外しボタンを
押しながらはずす


スイッチは
「OFF」

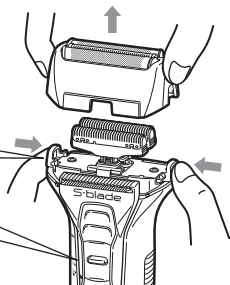

2 外刃、内刃、キワゾリ刃を 水洗いする。

注意


- 熱湯を使用しない。
(変形・故障の原因)
- 水中につけ置きしない。
(機器の故障の原因)
- 浴室、トイレ用洗剤などは使用しない。
(機器の故障の原因)

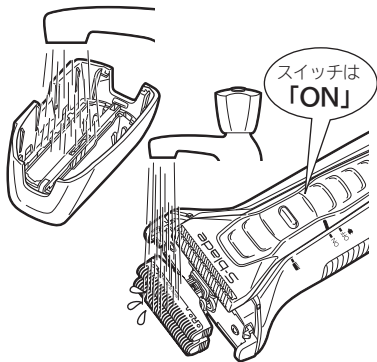


お手入れ

汚れがひどい場合やおちにくい場合

一度水洗いをした後、外刃に台所用洗剤(中性)を少量つけ、スイッチを「ON」にして約20秒間刃面全体をまんべんなく泡立てたあと、もう一度水洗いをするとうれが取れます。

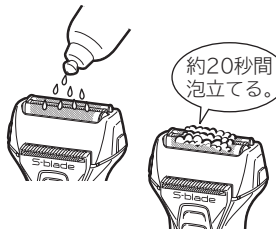

※それでも汚れや臭いが取れない場合は、外刃、内刃をはずし台所用洗剤(中性)を少量入れた水またはぬるま湯に8時間ぐらいつけた後、水洗いしますと汚れや臭いが取れます。

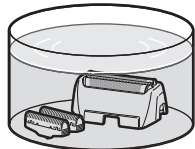


- 外刃、内刃の取りはずし方・取り付け方は26～27ページの「外刃・内刃の取り替えかた」を参照ください。

浴室、トイレ用洗剤などは使用しないでください。

3 本体の水滴をふき取り、乾燥させる。


- 外刃ホルダーをはずしておくと早く乾燥します。

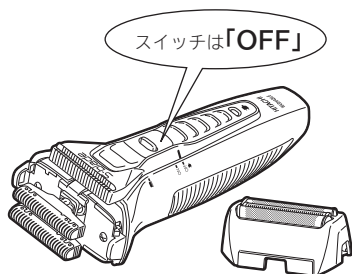

注意

- 本体を振って水切りしない。(内刃がはずれる原因)
- 直射日光の当たる所、高温になる所では乾燥させない。(防水ゴムの劣化による故障や本体が変形する原因)
- ドライヤーなどの機器で乾燥しない。(故障の原因)
- 子供の手の届くところに置かない。


4 乾燥後は、別売のシェーバークリーナーを外刃とキワゾリ刃に塗布する。

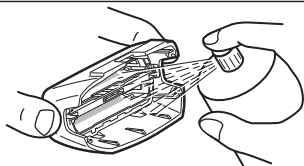

⚠ 注意

乾燥後は、必ず別売のシェーバークリーナーを外刃とキワゾリ刃に塗布する。
(切れ味の低下、使用回数の減少、外刃が磨耗して早期破損、刃の発熱などの原因)

5 外刃ホルダーを取りつけ、約10秒間空運転させて、ティッシュなどで外刃とキワゾリ刃の表面をふき取る。

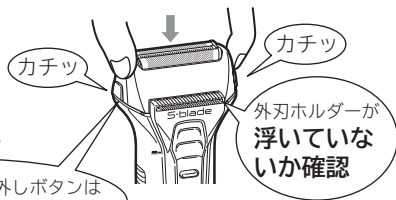

⊘ 外刃ホルダー取外しボタンは押さない

- 両側の取外しボタン部から片側ずつ「カチッ」と音がするまで押し込みます。



お手入れ


- 6 お手入れ後は、湿気の少ないところに保存する。
- 浴室などに放置すると、本体内部で結露が発生して機器の故障の原因になります。
- 7 蓄電池の劣化を予防する。
- 長期間ご使用されない場合は、蓄電池の劣化を防ぐために6か月に一度は5時間充電してください。

ブラシでの掃除


- 1 スイッチを「OFF」にして
外刃ホルダーをはずす。

外刃ホルダー取外しボタンを
押しながらはずす


スイッチは
「OFF」

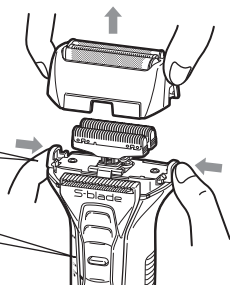

- 2 外刃、内刃、キワゾリ刃
および本体を掃除する。

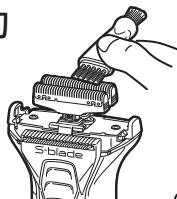

外刃の網刃には
掃除用ブラシを
当てないで



3 掃除した後は、キワゾリ刃を収納して、外刃ホルダーを取りつける。

- 両側の取外しボタン部から片側ずつ「カチッ」と音がするまで押し込みます。

カチッ

カチッ

外刃ホルダーが
浮いていないか確認

⊘ 外刃ホルダー取外しボタンは
押さない



お願い

- 週に一度は、別売のシェーバークリーナーを外刃とキワゾリ刃に塗布し、約10秒間空運転させてティシューなどで外刃とキワゾリ刃表面をふき取ってください。

- 本体の汚れは、水または薄めた台所用洗剤（中性）を含ませて固く絞った布で、ふき取ってください。

注意

アルコール、ベンジン、シンナーなどは使用しない。
(変形・変色の原因)

外刃・内刃の取り替えかた

⚠ 注意

刃を取り替えるときは、必ず電源プラグを抜いてスイッチを「OFF」にする。(けがをする原因)

外刃は強く持たない。
(破損して指を傷つける原因)


お願い

替刃交換後は必ず別売のシェーバークリーナーを塗布してください。
(内刃が動かなかったり刃面が熱くなるなどの原因)

外刃の取り替えかた


- 1 スイッチを「OFF」にして外刃ホルダーをはずす。

- 2 外刃をはずす。

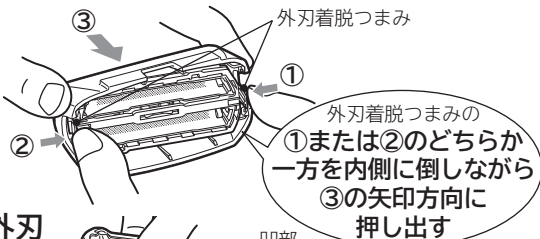

- 3 新しい外刃を外刃ホルダーに取りつける。


- 4 外刃ホルダーを取りつける。

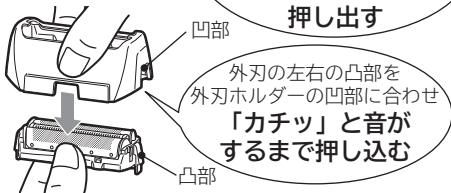

内刃の取り替えかた

1 内刃をはずす。

内刃の
両端を持って
矢印方向に
引っばる

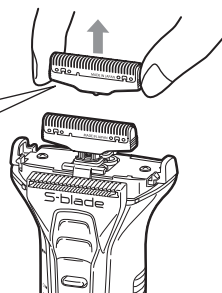


2 新しい内刃を取りつける。

- キワゾリ刃側から取りつくと、内刃バネの確認が容易にできます。


内刃の凸部を
内刃ホルダーの
凹部に押し込む

凸部
凹部

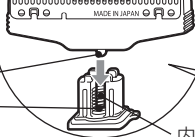

内刃バネ

内刃の凸部が
内刃バネの内側
に入っていること。

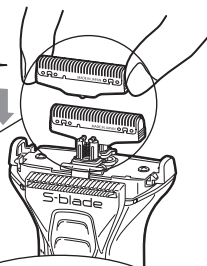

注意

内刃は2個同時に交換してください。

「故障かな」と思ったときは

修理を依頼する前に、次の点検をしてください。

症状	点検するところ	直す方法
<ul style="list-style-type: none"> 刃面が熱い。 切れ味が悪い。 内刃の動きが弱い。 使用回数が少ない。 	刃の内側に毛くずや石けんカスが多量にたまっていませんか。	掃除と別売のシェーパークリーナーの塗布を定期的に行ってください。
	刃面が油切れしていませんか。	
	外刃全面を肌にあてていますか。	16ページのじょうずなそりかたを参照ください。
<ul style="list-style-type: none"> スイッチを「ON」にしたとき、毛くずが飛び散る。 臭いが強くなった。 	外刃ホルダーは正しく取り付けられていますか。	23ページの5項を参照ください。
	毛くずがたまっていませんか。	20～25ページのお手入れを定期的に行ってください。
	お手入れが不十分ではないですか。	
<ul style="list-style-type: none"> 充電ができない。 スイッチを「ON」にしても動かない。 	<ul style="list-style-type: none"> 充電切れになっていませんか。 毛くずがたまっていませんか。 刃面が油切れしていませんか。 	<ul style="list-style-type: none"> 充電してからご使用ください。 20～25ページのお手入れを定期的に行ってください。
<ul style="list-style-type: none"> 電源アダプターを接続しても動かない。 	<ul style="list-style-type: none"> 充電切れになっていませんか。 	<ul style="list-style-type: none"> スイッチを「OFF」にして約1分間待ってからご使用ください。

以上のことをお調べになり、それでも具合の悪いときは、ご自分で修理なさらないで、お買い上げの販売店にご相談ください。

お客様ご相談窓口

日立家電品についてのご相談や修理はお買い上げの販売店へ
なお、転居されたり、贈物でいただいたものの修理などで、
ご不明な点は下記窓口にご相談ください。
※下記窓口の内容は、予告なく変更させていただく場合がございます。

ホームページに「よくあるご質問」について掲載しておりますので、
ご活用ください。

http://kadenfan.hitachi.co.jp/q_a/index.html

商品情報やお取り扱いについてのご相談はお客様相談センターへ

TEL 0120-3121-11
FAX 0120-3121-34

(受付時間) 9:00～17:30(月～土)
9:00～17:00(日・祝日)

年末年始は休ませていただきます。
携帯電話、PHSからもご利用できます。

修理に関するご相談は
エコセンターへ

TEL 0120-3121-68
FAX 0120-3121-87

(受付時間) 9:00～19:00(月～土)
9:00～17:30(日・祝日)

携帯電話、PHSからもご利用できます。

- 「持込修理」および「部品購入」については、上記サービス窓口にて各地区のサービスセンターをご紹介します。
- ご相談、ご依頼いただいた内容によっては弊社のグループ会社に個人情報を提供し対応させていただくことがあります。
- 修理のご依頼をいただいたお客様へ、アフターサービスに関するアンケートハガキを送付させていただくことがあります。

保証とアフターサービス

この商品の保証とアフターサービスについては、日本国内においてのみ適用します。

保証書（一体）

この商品は保証書つきです。

保証書は、必ず「お買い上げ日」・「販売店名」などの記入をお確かめのうえ、販売店から受け取っていただき、内容をよくお読みの後、大切に保存してください。

保証期間

お買い上げの日から1年間

修理を依頼されるときは

持込修理

28ページの「故障かなと思ったときは」を調べていただき、なお異常のあるときは、使用を中止し、必ず電源プラグを抜いてから、お買い上げの販売店にご相談ください。

■ 保証期間中は

修理に際しましては、保証書をご提示ください。
保証書の記載内容に基づいて修理させていただきます。

■ 保証期間が過ぎているときは

修理によって機能が維持できる場合は、ご希望により有料で修理させていただきます。

■ 修理料金のしくみ（修理料金＝技術料＋部品代）

技術料	診断、部品交換、調整、修理完了時の点検などの作業にかかる費用です。技術者の人件費、技術教育費、測定機器などの設備費、一般管理費などが含まれます。
部品代	修理に使用した部品代金です。その他修理に付帯する部材等を含む場合があります。

(必ずお読みください。)

補修用性能部品の保有期間

- シェーバーの補修用性能部品の最低保有期間は、製造打ち切り後6年です。
- 補修用性能部品とは、その商品の機能を維持するために必要な部品です。

ご不明な点や修理に関するご相談は

- 修理に関するご相談並びにご不明な点は、お買い上げの販売店または29ページのお客様ご相談窓口にお問い合わせください。

仕 様

定格電圧	AC100-240V 50-60Hz 共用
入力容量	11VA (電源アダプター：KH-48)
消費電力	約1.2W (AC100V充電時)
使用電池	ニッケル水素電池 DC1.2V 2本 定格容量：600mAh (5時間充電時)
充電時間	5時間 (室温10～35℃)
質 量	本 体 : 約140g 電源アダプター : 約80g
付 属 品	掃除用ブラシ

消耗部品・別売り部品

替刃・シェーバークリーナーを用意しています

■刃は消耗品です。早めに別売の替刃と交換してください。交換の目安は、1日1回3分間使用して、正しい使い方(15～18ページ参照)、お手入れ(20～25ページ参照)をしていただいた場合。

●外刃……約1年半 ●内刃……約3年

■日立の家電品取扱店でお買い求めください。

- 替刃(外刃) RM-T348 : K-T40S
RM-W248 : K-W41S
(内刃) K-W22U
- 潤滑剤(シェーバークリーナー SC-51H)
- オイル(部品番号 CL-324 008)

愛情点検



長年ご使用のシェーバーの点検を！

こんな症状はありませんか



- 電源アダプターが異常に熱くなる。
- 本体が変形していたり、こげくさい臭いがする。
- その他の異常・故障がある。



ご使用中止

故障や事故防止のため、スイッチを「OFF」にし、電源プラグをコンセントから抜いて、必ず販売店にご相談ください。

製品を廃棄するときのお願い っづく

 危険	<p>取り出した蓄電池は充電や以下のことをしない。(発熱・発火・破裂の原因)</p> <ul style="list-style-type: none">● 火への投入、加熱をしない。● くぎで刺したり、衝撃を与えたり、分解・改造をしない。● ⊕と⊖を金属などで接触させない。● ネックレス、ヘアピンなどと一緒に持ち運んだり保存しない。● 火のそばや炎天下など高温の場所で放置しない。
 警告	<p>取り出した蓄電池は乳幼児の手の届くところに置かない。万一、飲み込んだと思われるときは、すぐに医師に相談する。</p> <p>蓄電池の液が漏れたときは、素手で触れずに以下の処置をする。</p> <ul style="list-style-type: none">● 液が目に入ったときは、目をこすらずに、すぐにきれいな水で洗ったあと医師に相談する。● 液が体や衣服に付いたときは、きれいな水で十分洗い流したあと医師に相談する。 <p>製品を廃棄するとき以外は分解しない。 (火災・感電・けがの原因)</p>

製品を廃棄するときのお願い

- この製品には、ニッケル水素電池を使用しております。ニッケル水素電池はリサイクル可能な貴重な資源です。ご使用済み製品の廃棄に際しては、ニッケル水素電池を取りはずしていただき、製品をお買い求めのお店、またはニッケル水素電池のリサイクル協力店へお持ちいただき、リサイクルへご協力をお願いいたします。




ニッケル水素電池は
リサイクルへ

リサイクル協力店の詳細は、一般社団法人
JBRCのホームページをご参照ください。
<http://www.jbrc.com>


- 蓄電池以外にも、リサイクル可能な部品が含まれています。蓄電池以外の部品の廃棄に際しましては、お住いの地域の条例などに従って処理してください。

ニッケル水素電池の取りはずしかた

- 1 シェーバーが完全に動かなくなるまで、スイッチを「ON」にしてニッケル水素電池を放電させる。
- 2 スイッチを「OFF」にしてキャップ、外刃ホルダー、内刃をはずす。
- 3 駆動部の⊕ネジ2本をはずし、振動子ピースA、振動子ピースB、プレート、カバーをはずす。

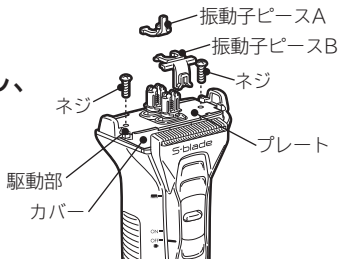

- 4 本体から駆動部と電源部を取り出し、ニッケル水素電池のリード線を端子の近くで切り、蓄電池を取り出す。

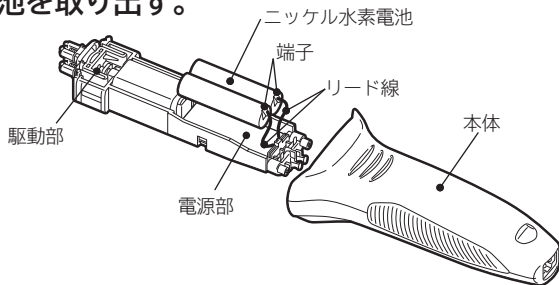

⚠ 注意

取りはずしたニッケル水素電池はリード線の切り口や電池の端子を、金属を含まないテープ等で絶縁し、互いに接触させない。また、切り口や端子を人体や他の金属に接触させない。
(ショート・やけどの原因)

販売元: 日立コンシューマ・マーケティング株式会社 リビングサプライ社
〒105-8413 東京都港区西新橋2-15-12

製造元: 日立マクセル株式会社
〒822-1296 福岡県田川郡福智町伊方4680

Product warranty and after-sales service are only valid in Japan.

Preparation before use (P.3~6)

How to charge (P.3)

- Charge before first use.
- Make sure to use the included power adaptor for 100 - 240V AC power.
- The recommended charging temperature is in the range of 10 – 35°C
At a temperature below the recommended temperature, the charging response may slow down, causing an insufficient charge and a reduced number of operating times.
- Each battery has a service life.

(The battery life greatly varies according to the conditions of use and storage.)

If the number of operating times is extremely small in spite of use in accordance with the instructions, it is considered that the battery life is about to expire. For battery replacement, consult with your distributor or customer service representative listed on page 29.

⚠ WARNING

Never connect or disconnect to/from the outlet with wet hands. (Cause of electric shocks or injury)

Do not use the power adaptor in a place where water is splashed, such as a bathroom, or in a place with high humidity. (Cause of electric shocks and short circuits)

⚠ CAUTION

Wipe away water drops on the main body sufficiently to dry it before charging.

(Cause of burns due to short circuits and heat generation)

1. Turn "OFF" the switch and connect the power adaptor to the main body and outlet.

Caution

- When the switch is turned "ON," this cannot be charged.

When the battery is completely discharged, the charge lamp may not light.

If charging is continued as it is, the battery will start to be charged after the charge lamp has lit.

Recommended

- Wipe off water droplets if adhered to the main body socket.
 - Please use another outlet if noise is generated from the TV, etc., during charging or operation.
2. After completion of charging, disconnect the power adaptor.
 - During charging, the power adaptor and the main body may slightly heat up, this is not abnormal.

- The standard charging time is 5 hours.

- With one charge, it can be used for approximately 7 days (3 minutes of use per day).




(The number of operating times may decrease depending on the operating conditions, such as beard thickness, pressing force to skin, method of maintenance, and low ambient temperature.)

Names of parts and their functions (P.7~8)








- ① **Cap** : Protects the outer blade.
- ② **Outer blade holder**
- ③ **Outer blade**
Replacement blade RM-T348:K-T40S
 RM-W248 :K-W41S
- ④ **Inner blade**
(Replacement blade K-W22U)
- ⑤ **Inner blade holder**
- ⑥ **Switch**
Slide while pressing the lock button.
- ⑦ **Lock button**
- ⑧ **Charge lamp**
During charging: The lamp turns on(red).
After completion of charging: The lamp turns off.
- ⑨ **Center trimmer**
- ⑩ **Outer blade removal button**
- ⑪ **Outer blade holder removal button**
- ⑫ **Trimming blade**
Use this blade when shaving a long beard that is hard to shave with the outer blade, and when trimming a beard, sideburns, and the nape of the neck.
- ⑬ **Batteries** (built-in)
Ni-MH batteries: one
- ⑭ **Body socket**
- ⑮ **Power plug** : Insert into an outlet to the ends.
- ⑯ **Plug for equipment**
- ⑰ **Cord**
- ⑱ **Cleaning brush**

Safety precautions Never fail to observe (P.9~13)

- Items described here are for using the product safely and properly, and to prevent hazards and injury to the user and other persons before they occur.
- Items are classified as follows.
All items are important descriptions related to safety, therefore make sure to observe them.






 DANGER	Extent of imminent hazard which has the potential to cause death or serious injury to the user in the case of improper handling.
 WARNING	Extent of hazard which has the potential to cause death or serious injury to the user in the case of improper handling.
 CAUTION	Extent of hazard or damage which has the potential to cause injury to the user or damage to physical property (houses and household goods) in the case of improper handling.

<Example of graphic illustration>


-  This symbol means "prohibited" (never do this).
-  "Disassembly prohibited"  "Prohibited use in wet location"
-  "Prohibited to wet"
-  This symbol means "compulsory" (be sure to do).
-  "General activities"  "Pull out the power cord from outlet"

- After reading this manual, the user should preserve it in a place where it can be referred to at any time.

WARNING

-  Use only 100 - 240V AC for power supply. (Cause of fires and electric shocks)
Never place the shaver within reach of children. (Cause of injury)
Never use a power cord if they are damaged or insertion to the outlet is loosened. (Cause of electric shocks, short circuits and ignition)
Never allow pins or dust to adhere to the power plug and plug for equipment. (Cause of electric shock, short circuit and ignition)
Do not damage, unnecessarily bend, pull, twist, bind, place a heavy object on top, sandwich, process or wind the power cord around the power adapter, etc. (If the power cord breaks, fires or electric shocks may occur.)
-  Never wash the power adaptor with water. Also, never soak them in water or splash water on them. (Cause of electric shocks and short circuits)
Never foam-shave or clean with water while using the AC. (Cause of electric shocks and short circuits)
-  Do not use the power adaptor and in a place where water is splashed, such as a bathroom, or in a place with high humidity. (Cause of electric shocks and short circuits)
-  Be sure to disconnect the power cord from the outlet for maintenance. Never connect or disconnect the power plug to/from the outlet with wet hands. (Cause of electric shocks or injury)
-  Never modify the shaver. Only a qualified technician may make repairs. (Cause of fires, electric shocks or injury) • Consult your distributor for repair.

CAUTION

-  Check for any breakage or deformation of outer blade before use. (Cause of damage to skin)

The outer blade wears each time it is used. When wear proceeds, breakage of blades may occur during use and cause damage to skin. Replace it with a separately sold replacement blade as soon as possible.

When disconnecting a power plug for equipment, do not pull the cord, but be sure to pull the plug to disconnect. (Cause of electric shocks, short circuits or ignition)
Regularly clean the power plug and plug for equipment so that dust does not form on them. (Cause of electric shocks, short circuits or ignition)
Wipe away water drops on the main body sufficiently, and charge in dry state. (Cause of short circuits, burns due to heating)
Use carefully if you have acne or abrasions on skin. (Breakage causes damage to skin)
After operation, keep it in a place free from moisture. (Cause of damage to the shaver if left in a bathroom due to condensation and rust occurring inside the main body)
After use, make sure to put on the cap. (Cause of damage to skin by breakage or deformation of the outer blade)

- ⊗ This is used for shaving only. Never use it for other (for hair, etc.) than shaving.
(Cause of damage to skin and shortening the life of the outer blade.)
Never share the shaver with family members or others.
(Cause of infection or inflammation)
Never push the blades strongly.
(Cause of damage to skin especially lips or damage to the shaver.)
Never touch the cutting edge of the inner blade with bare hands.
(Cause of injury to fingers)
Do not shave with the outer blade removed (with the inner blade alone).
(Cause of damage to skin)
Never bring fingers or nails into contact with the outer blade during use.
(Cause of damage to the outer blade resulting in damage to skin)
Never use any other power adaptor than the ones included.
Also, do not charge any other product with the included power adaptor.
(Cause of fires by short circuits or abnormal heating)
During maintenance, do not apply the cleaning brush to the perforated cutting foil.
(Cause of breakage of the outer blade)
Do not apply the trimming blade directly to ears and nose.
(Cause of injury to ears and nose)
- ⊗ Disconnect the power plug from the outlet when it is not used.
(Cause of injury, burns, or electric shocks and fires from electric leakage due to insulation degradation)

Safety precautions (P.14)

- Never use cream or gel shaving agents.
Cause of clogging and damage to the blade.
- Never soak the blade in water.
Cause of damage to the shaver.
- Never dry it using a dryer or a fan heater, etc.
Cause of deformation or damage to the shaver.
- Do not charge at each time of use.
Cause of impairment of the battery performance
- Never allow to dry or leave it in a place exposed to direct sunlight and high temperatures.
Cause of damage to the shaver due to deformation and deterioration of the waterproof rubber.
- Never wipe the shaver or the power adaptor with alcohol, benzene, and thinner, etc.
Cause of deformation and discoloration.

How to use (P.15~19)

- For initial use, trim while lightly applying the shaver to skin.

How to shave with the outer blade (P.15)

⚠ CAUTION

Check that there is no breakage and deformation of the outer blade before use.

(Cause of damage to skin)

Never press it strongly to the skin.

(Cause of damage to skin especially lips and cause of damage to the outer blade)

Never shave with only a part of the outer blade or bring fingers or nails into contact with the outer blade during use. (Cause of damage to the outer blade resulting in damage to skin)

Use carefully if you have acne or abrasions on skin. (Breakage causes damage to skin)

1. Remove the cap, and turn the switch to "ON" while pressing the lock button.
2. Shave in the direction of the arrow against the flow of your beard so as to slide lightly.

How to shave closely

- (1) Stretch your skin with one hand to raise your beard.
- (2) Lightly apply the entire outer blade to skin.
- (3) Lightly apply, and slowly shave against the flow of your beard so as to slide.
 - To shave a long grown beard that is hard to shave with the outer blade:
Cut a long grown beard short with the trimming blade, and finish with the outer blade.

The recommended operating temperature is in the range of 10 – 35°C.

Use or storage at a temperature below the recommended temperature may disable the shaver or cause a reduced number of operating times.

3. After use, turn the switch to "OFF" and attach the cap to the shaver.

■ You can also shave with soap (shaving foam).(P.16~17)

⚠ CAUTION

Never soap-shave with alternating current. (Cause of short circuits)

Never press on the skin strongly. (Cause of damage to skin and breakage of outer blade)

- Use of commercially available shaving foam results in better sliding on skin and closer shaving.

Note : Never use shaving agents in cream or gel form. (Cause of blade clogging)

1. Lather your face well.
2. Apply to your skin more lightly than when you shave in a dry state (without using shaving foam), and slowly shave against the flow of your beard so as to slide.

Add foam as appropriate because if it dries, poor sliding on skin will result.

3. After use, make sure to wash off the soapy components with water.

For how to wash with water, see the "Maintenance" section on page 21-23.

If any soapy components remain, it will lead to failure of the equipment, or cause deterioration in sharpness, reduction in operating times, etc.

4. After maintenance, lubricate and keep the shaver in a place free from moisture.
Leaving the shaver in a bath, etc., will cause failure due to dew condensation inside the body.

How to use with alternating current (P.18)

⚠ WARNING

Never use in places splashed with water, such as in a bath, or in humid places.

(Cause of electric shocks or short circuits)

Never soap-shave or wash with water. (Cause of electric shocks or short circuits)

1. Connect the power adapter to the body and an outlet, and turn the switch to "ON."
 - If the batteries are completely discharged, the shaver may be hard to start. In this case, charge for approximately one minute by turning the switch to "OFF" before use.
2. Use in accordance with "How to shave with the outer blade" on page 15 and 16.
3. After use, turn the switch to "OFF" and remove the power adapter from the outlet and body.

How to shave with the trimming blade (P.19)

If a lot of hair enters the blade edge, the hair will be pulled, or get stuck, causing deterioration in sharpness.

1. Attach the cap back to front and slide the switch to the "■" by pressing the lock button.
 - Use the shaver with the cap attached. (Head hair may get inside the outer blade.)
2. Lightly apply to your sideburns at right angles, and slowly shave in the direction of the arrow.

CAUTION

Never press the blade edge to the skin strongly or slide sideways. (Cause of damage to skin)

3. After use, slide the switch to the "OFF" to place the trimming blade back into the original position, and attach the cap in the right position.

Maintenance (P.20~25)

Washing with water (P.21~24)

- The outer blade, inner blade and body can be washed with water.

Since clotted hair may not be removed by simply washing with water, occasionally remove it by using a cleaning brush.

1. Turn the switch to "OFF" and remove the outer blade holder.
2. Wash the outer blade, inner blade, and trimming blade with water.

Note : Do not use hot water. (Cause of deformation or failure)

Never soak in water. (Cause of failure)

Never use bathroom or toilet cleaner, etc. (Cause of failure)

Advice

If buildup is severe or difficult to remove, wash with water, apply a small amount of kitchen detergent (neutral) to the outer blade, turn "ON" the switch, and evenly foam the entire surface of the blade for approximately 20 seconds. Then, wash the shaver once again to remove buildup.

- If buildup still cannot be removed, remove the outer blade and inner blade, soak the shaver in water or lukewarm water containing a small amount of kitchen detergent (neutral) for approximately eight hours, then wash it with water to remove buildup.

Please refer to "How to replace the outer blade and inner blade" on pages 26 to 27 to detach or attach the outer blade and inner blade.

Never use bathroom or toilet detergents, etc.

3. Wipe water drops off the body, and dry.
 - If the outer blade holder is removed, quick drying will result.

Note:

- Never shake the main body to drain off water. (Cause of disconnection of inner blade)
- Never dry in places exposed to direct sunlight or high temperatures.
(Cause of failure by degradation of water-proof rubber or deformation of the body)
- Never dry with a dryer, etc. (Cause of failure)
- Keep out of reach of children.

4. After drying, apply separately sold shaver cleaner to the outer blade.

CAUTION

After drying, be sure to apply separately sold shaver cleaner to the outer blade and trimming blade. (Prevents a reduction in sharpness, a decrease in the number of rotations of the motor, a reduction in the number of times of use, early breakage due to abrasion of the outer blade, or heat generation of the blade.)

5. Install the outer blade holder, idle for approximately 10 seconds, and wipe the surfaces of the outer blade and trimming blade with a tissue, etc..
Push down the both ends of the outer blade holder removal button until it clicks.
6. After maintenance, keep the shaver in a place free from moisture.
 - Leaving the shaver in a bath, etc., will cause failure due to dew condensation inside the body.
7. Prevent deterioration of the battery.
 - If the shaver is not used for a long time, charge it for 5 hours once every six months to prevent deterioration of the battery.

Brush cleaning (P.24~25)

1. Turn the switch to "OFF" and remove the outer blade holder.
2. Clean the outer blade, inner blade, trimming blade, and body.
3. After cleaning, store the trimming blade, and install the outer blade holder.

Recommended

- Once a week, turn "ON" the switch, apply separately sold shaver cleaner to the outer blade and trimming blade, and after 10 seconds, turn "OFF" the switch, and wipe the surfaces of the outer blade and trimming blade with tissue, etc.
- Wipe away any contamination on the body with a cloth wrung tightly after being moistened with water or watered-down kitchen detergent (neutral).

Note : Never use alcohol, benzene, thinner, etc. (Cause of deformation or discoloration)

How to replace the outer blade and inner blade (P.26~27)

⚠ CAUTION

When replacing the blade, be sure to disconnect the power plug, and turn the switch to "OFF".
(Cause of injury)

Never hold the outer blade strongly. (Breakage causes damage to fingers.)

Please note

Be sure to apply separately sold shaver cleaner after replacement of the blade.
(Cause of disabled inner blade or hot blade surface)

How to replace the outer blade (P.26)

1. Turn the switch to "OFF" and remove the outer blade holder.
2. Remove the outer blade.
3. Install a new outer blade to the outer blade holder.
4. Install the outer blade holder.

How to replace the inner blade (P.27)

1. Remove the inner blade.
2. Install a new inner blade.
 - Installation from the trimming blade side facilitates checking of the inner blade spring.

Caution

Replace the two inner blades at the same time.

1. 保証期間内でも次のような場合には有料修理となります。
 - (イ) 使用上の誤り、または改造や不当な修理による故障または損傷。
 - (ロ) お買い上げ後の落下、引越、輸送などによる故障または損傷。
 - (ハ) 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障または損傷。
 - (ニ) 車両、船舶にとう載して使用された場合に生じた故障または損傷。
 - (ホ) 業務用など一般家庭以外で使用されて生じた故障または損傷。
 - (ヘ) 本書のご提示がない場合。
 - (ト) 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合あるいは字句を書き換えられた場合。
2. この商品は持込修理の対象商品です。郵送などで修理依頼された場合の送料などはおお客様の負担となります。また、出張修理をご希望の場合には、出張に要する実費を申し受けます。
3. ご転居の場合は事前にお買い上げの販売店にご相談ください。
4. 贈答品などで本書に記入してあるお買い上げの販売店に修理をご依頼に出来ない場合には、取扱説明書に記載の「お客様ご相談窓口」にご相談ください。
5. 本書は再発行いたしませんので紛失しないよう大切に保存してください。
6. 本書は日本国内においてのみ有効です。Effective only in Japan

-
- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。したがってこの保証書によって保証書を発行している者（保証責任者）、およびそれ以外の事業者に対するお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明の場合は、お買い上げの販売店または取扱説明書に記載の「お客様ご相談窓口」にお問い合わせください。
 - お客様にご記入いただいた保証書の写しは、保証期間内のサービス活動およびその後の安全点検活動のために記載内容を利用して頂く場合がございますので、ご了承ください。
 - 保証期間経過後の修理、補修用性能部品の保有期間について詳しくは、取扱説明書をご覧ください。

修理メモ

日立シェーバー保証書

持込修理

保証期間内に取扱説明書などの注意書きにしたがった正常なご使用状態で故障した場合には、本書記載内容にもとづきお買い上げの販売店が無料修理いたします。

お買い上げの日から下記の期間内に故障した場合には、商品と本書をお持ちいただき、お買い上げの販売店に修理をご依頼ください。

※型	式	
保証期間		本体：1年（外刃・内刃は除きます。）
※お買い上げ日		平成 年 月 日
※お客様	お名前	様
	ご住所	〒 電話 ()
※販売店	住所名	〒 電話 ()

※印欄に記入のない場合は無効となりますから必ずご確認ください。

(裏面をご覧ください。)

◎日立コンシューマ・マーケティング株式会社 リビングサプライ社

〒105-8413 東京都港区西新橋2-15-12

電話 お客様相談センター 0120-3121-11