

日立ロータリーシェーバー保証書 持込修理

形名	RM-TX320・RM-TX330	
保証期間	本体：1年(外刃・内刃は除きます。)	
※お買い上げ日	平成 年 月 日	
※お客様	お名前	様
	ご住所	〒 電話 ( )
※販売店	住所	〒
	店名	電話 ( )

※印欄に記入のない場合は無効となりますから必ずご確認ください。  
保証期間内に取扱説明書などの注意書きにしたがった正常なご使用状態で故障した場合には、本書記載内容にもとづきお買い上げの販売店が無料修理いたします。  
お買い上げの日から上記の期間内に故障した場合は、商品と本書をお持ちいただき、お買い上げの販売店に修理をご依頼ください。

(裏面をご覧ください。)

◎株式会社 日立製作所

〒105 東京都港区西新橋2-15-12  
電話(03)3502-2111

144381

23456789XYZ7(K)CBA


取扱説明書

保証書つき  
裏表紙が保証書になっています。

日立ロータリーシェーバー

RM-TX320  
RM-TX330

1時間充電・交流式両用

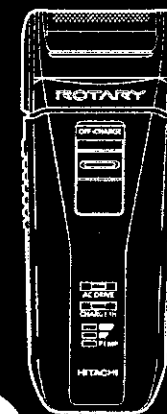

HITACHI

お買い上げありがとうございます。  
この「取扱説明書」をよくお読みになり、正しくご使用ください。  
お読みになった後は、大切に保存してください。

目次

- 安全上のご注意 ————— 1~3
- 各部の名称と働き ————— 4~5
- 充電のしかた ————— 6~8
- 使いかた ————— 9~10
- お手入れ ————— 11~13
- 外刃・内刃の取り替えかた — 14~15
- 仕様 ————— 16
- ニカド電池のリサイクルについて — 17~18
- 「故障かな?」と思ったときは ——— 19
- 保証とアフターサービス — 20~21

## 安全上のご注意

- ここに示した注意事項は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や損害を未然に防止するためのものです。
- 注意事項は次のように区分しています。いずれも安全に関する重要な内容ですので、必ず守ってください。

	<b>警告</b> 誤った取扱いをすると、人が死亡または重傷を負う可能性が想定される内容。
	<b>注意</b> 誤った取扱いをすると、人が傷害を負う可能性および物的損害のみの発生が想定される内容。

### 〈絵表示の例〉


	△記号は、警告・注意を促す内容を示す。 図の中に具体的な注意内容が描かれています。 △は「一般的な注意」
	⊘記号は、禁止の行為であることを示す。 図の中に具体的な禁止内容が描かれています。 ⊘「分解禁止」 ⊘「水場での使用禁止」
	●記号は、行為を強制や指示する内容を示す。 図の中に具体的な指示内容が描かれています。 ●は「一般的な行為」 ●は「電源プラグをコンセントから抜く」

<b>警告</b>	
	交流100-240V以外の地域では、使用しない。 (感電・火災の原因)
	電源コードや電源プラグが傷んだり、コンセントの差し込みがゆるいときは使用しない。 (感電・ショート・発火の原因)
	電源コードを傷つけたり、加工したり、無理に曲げたり、引っ張ったり、重い物をのせたり、はさみ込んだりしない。 (感電・火災の原因)
	水につけたり、水をかけたりしない。 また、浴室では使用しない。 (感電・ショートの原因)
	お手入れの際はスイッチを「OFF」にして、電源プラグをコンセントから抜く。 また、ぬれた手で電源プラグを抜き差ししない。 (感電・けがの原因)
	改造はしない。また、修理技術者以外の方は分解・修理を絶対にしない。 (感電・火災・けがの原因)


## 安全上のご注意

⚠注意	
!	ご使用前に刃の破れや変形がないか確認する。 (肌を傷つける原因)
	刃は強く押さえない。(破損して肌を傷つける原因)
	内刃は素手で触れない。(指を傷つける原因)
	器具用プラグにピンやごみを付着させない。 (感電・ショート・発火の原因)
⊘	電源プラグや器具用プラグを抜くときは、電源コードを持たずに、必ずプラグ部分を持って抜く。 (感電・ショート・発火の原因)
	充電時・交流使用時以外は、電源プラグをコンセントから抜く。 (けがや、絶縁劣化による感電・漏電火災の原因)

## 各部の名称と働き

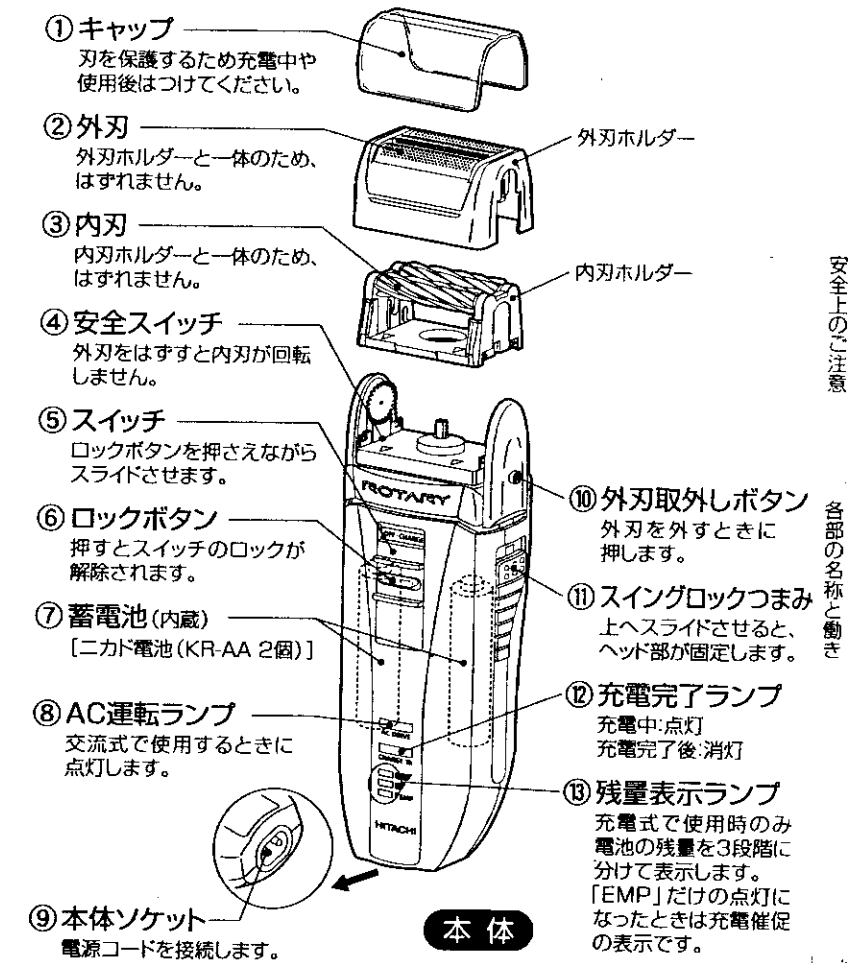


## 各部の名称と働き

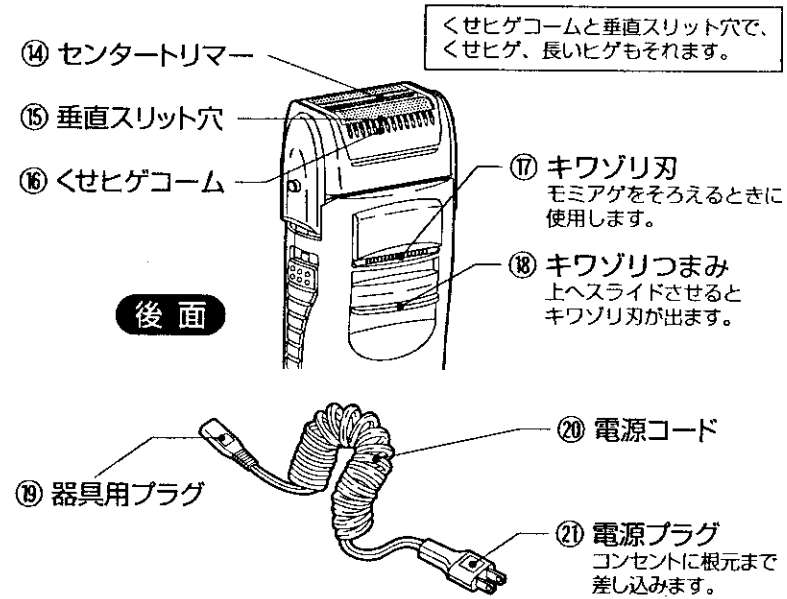


### 付属品

㉒ 掃除用ブラシ




㉓ スタンド

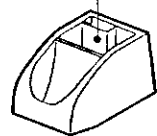

RM-TX320のみ

㉔ ソフトケース

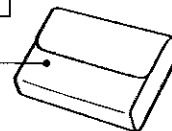



RM-TX330のみ

㉕ デラックス  
ソフトケース



## 充電のしかた

- 初めてご使用になる前に、まず充電してください。
- 充電は必ず交流100V-240V電源で行ってください。
- 標準充電時間は1時間です。
- 1回の充電で約10日間使用できます。(1日3分間使用して)

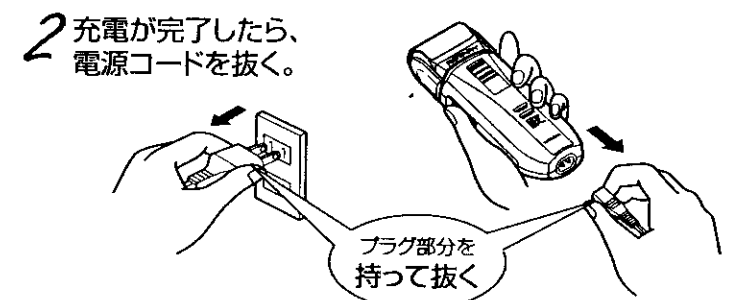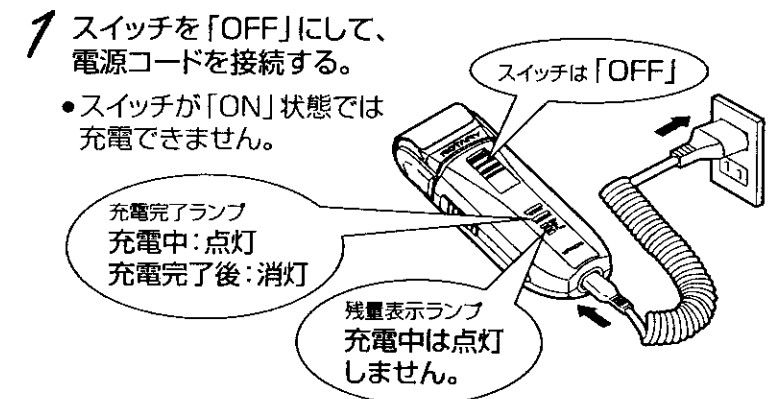

- 充電中、本体が少し熱くなることがありますが、故障ではありません。

## 充電のしかた

■電源コードを接続してスイッチを「ON」にしますと、交流式として使用できます。


- 蓄電池が完全に放電していますと、起動しにくいときがあります。そのときは、約1分間充電してからご使用ください。

- 交流式として使用される場合も蓄電池は消耗しますので、2週間に1回は充電してください。
- 交流式で使用される場合は、定格時間5分以内でご使用ください。

AC運転ランプ  
交流式で使用のときに点灯します。

残量表示ランプ  
充電中や交流式で使用のときは点灯しません。

充電式で使用時のみ電池の残量を3段階に分けて表示します。「EMP」だけの点灯になったときは充電催促の表示です。早めに充電してください。

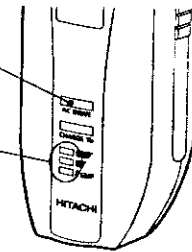

蓄電池(ニカド電池)の性能を十分に発揮させるために、次のことを守ってください。

- (1) 充電は「残量表示ランプ」が消灯してから行う。  
使用の都度充電しますと「残量表示ランプ」が早めに消灯することがあります。  
(これはニカド電池のメモリー効果によるものです。)
- (2) 深い放電を避ける。  
3カ月以上使用しなかったり、動かなくなった後もスイッチを「ON」にしたまま放置しますと、ニカド電池が自然に深い放電状態になり、次に充電しても使用回数が少なくなったり、「残量表示ランプ」が早めに消灯することがあります。  
(これはニカド電池の不活性化(充電反応の鈍化)によるものです。)

メモリー効果や不活性化を起こしたニカド電池を復帰させる方法

シェーバーが止まるまで  
使いきる。

1時間充電する。

これを2~3回繰り返しますと、ニカド電池は元の状態に復帰します。

- (3) 初めてご使用のときは  
1時間充電しても使用回数が少なかった場合は、上記のニカド電池を復帰させる方法に従って充電してください。正常に戻ります。
- (4) 周囲温度が0℃~40℃以内で充電してください。

## 使いかた



ご使用前に刃の破れや変形がないか確認する。  
(肌を傷つける原因)

### 外刃でのそりかた


1 スイッチを「ON」にする。

2 キワゾリ刃側を上にして、  
矢印方向に逆ぞりする。

#### — じょうすなそりかた —

- (1) 肌を手で伸ばしてヒゲを  
起こす。
- (2) 刃面を肌に直角に当てる。
- (3) 軽く当ててゆっくり逆ぞり  
する。

• 鼻の下をそるときは  
スイングロックつまみをスラ  
イドさせて、ヘッド部を固定  
させる。

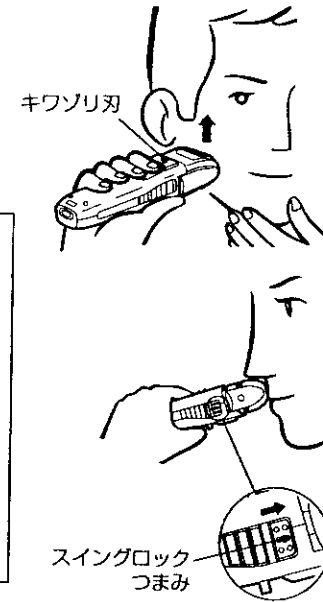

肌に強く押しつけないでください。  
(肌を傷つけたり、外刃破損の原因。)

キワゾリ刃側を下にして、そらないでください。  
(肌を傷つける原因。)




9

### キワゾリ刃でのそりかた

1 スイッチを「ON」にして、  
キワゾリ刃を出す。

2 キワゾリ刃を肌に直角に軽く  
当てて、矢印方向にゆっくり  
そる。

3 使用後は、スイッチを「OFF」  
にして、キワゾリ刃を収納する。

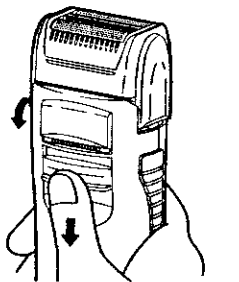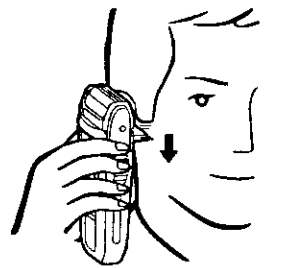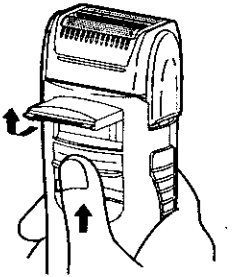

## お手入れ

### ■安全スイッチについて


外刃をはずした状態や外刃の前後が逆になった場合は、内刃が回転しないように、安全スイッチを内蔵しています。

### ■快適な切れ味を保つために

• 2日～3日に1回は掃除してください。  
毛くすがたまと、切れ味が悪くなります。

• 週に一度は、外刃に別売りのシェーバークリーナー(潤滑油)を吹きつけ、空運転させて外刃の表面をふきとってください。

- 回転をなめらかにします。
- 切れ味を保ちます。
- 刃の摩耗を防ぎます。
- 使用回数の減少を防ぎます。

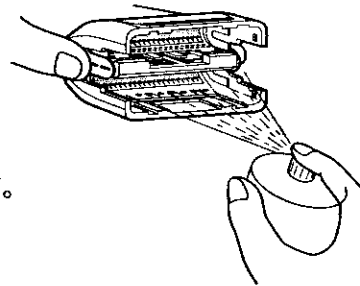

• 本体の汚れは、水か中性洗剤液を含ませて固く絞った布でふきとってください。

### 注意

アルコール、ベンジン、シンナーなどは使用しないでください。  
(変形・変色の原因)




お手入れの際は、必ず電源プラグを抜いて、スイッチを「OFF」にする。(感電・けがの原因)




外刃は強く持たない。(破損して指を傷つける原因)  
内刃は素手で触れない。(指を傷つける原因)

### 1 外刃をはずす。

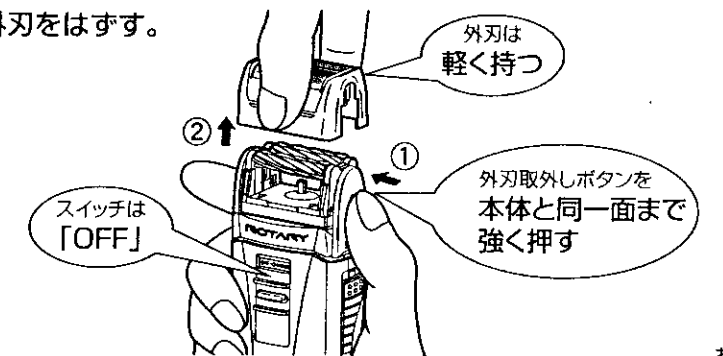


### 2 外刃、内刃、キワソリ刃 および本体を掃除する。

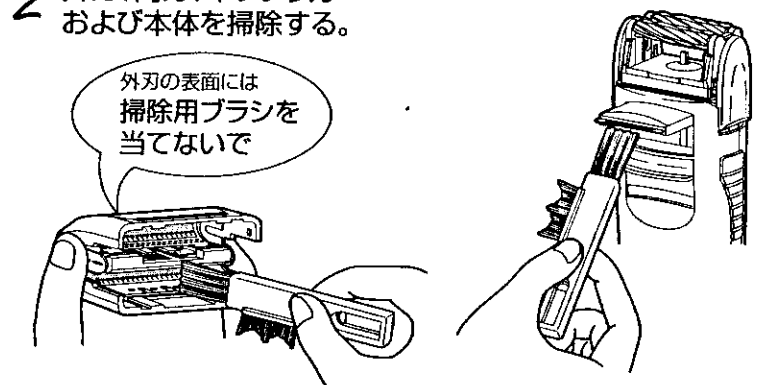


## お手入れ

- 図のように掃除用ブラシを内刃に強く押しつけながら矢印方向にすべらせると毛くずが取れます。くり返してください。

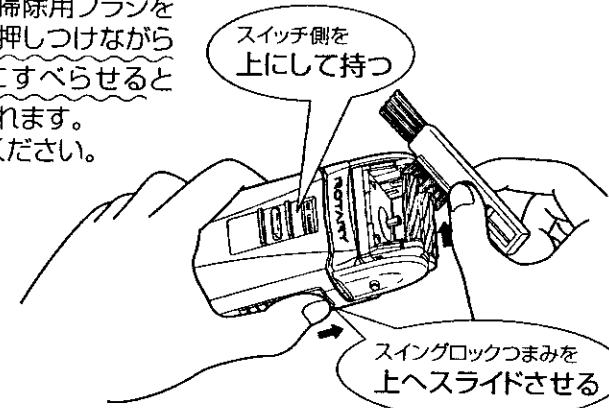

•ヘッドのスイングを止めると掃除しやすくなります。

- 掃除した後は、キワソリ刃を収納し、外刃を取り付ける。

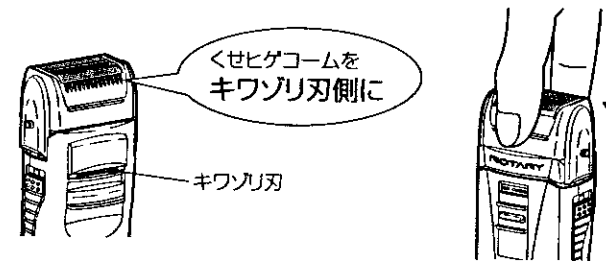

### 注意

外刃の前後が逆になりますと、確実に取り付けられず、安全スイッチが働いて内刃が回転しません。


13

## 外刃・内刃の取り替えかた つづ


	刃を取り替えるときは、必ず電源プラグを抜いて、スイッチを「OFF」にする。(感電・けがの原因)
	外刃は強く持たない。(破損して指を傷つける原因) 内刃は素手で触れない。(指を傷つける原因)

### 外刃の取り替えかた

- 外刃をはずす。

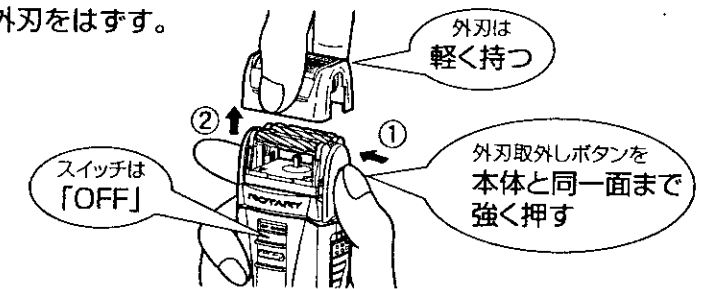

- 新しい外刃を取り付ける。

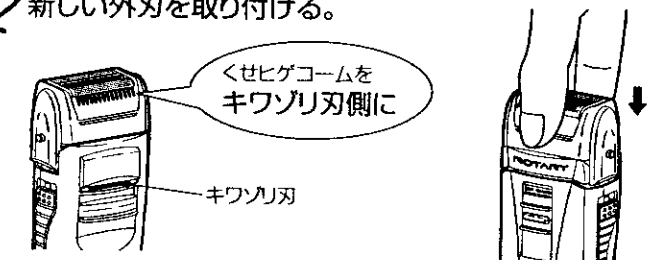

### 注意

外刃の前後が逆になりますと、確実に取り付けられず、安全スイッチが働いて内刃が回転しません。



## 外刃・内刃の取り替えかた


### 内刃の取り替えかた

#### 注意


- 内刃は交換するとき以外は、はずさないでください。
- 内刃交換の際は、指のけが防止のため、付属の内刃保護紙をご使用ください。

#### 1 内刃をはずす。


- 付属の内刃保護紙を内刃と内刃ホルダーの間に通して持ちます。

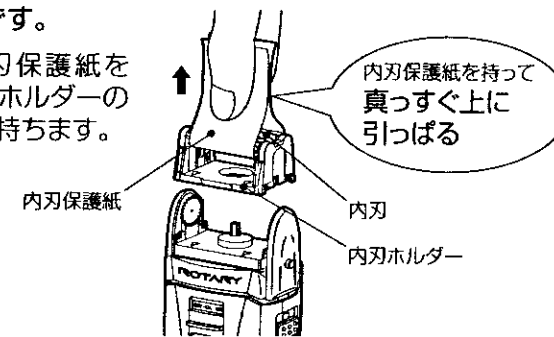

#### 2 新しい内刃を取り付ける。

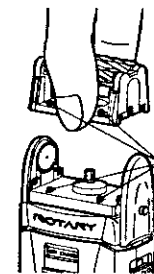

内刃と本体の  
合わせマーク(▽)  
を合わせ

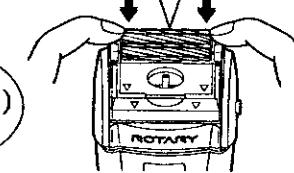

#### 注意

内刃は前後が逆になりますと、取り付けられません。

## 仕様

電源	AC100V-240V 50-60Hz共用 蓄電池[ニカド電池(DC1.2V,500mAh)2個]		
消費電力	8W		
充電時間	1時間	コード長さ	1.7m
定格時間	5分	質量	230g
付属品	RM-TX320	掃除用ブラシ、スタンド、ソフトケース	
	RM-TX330	掃除用ブラシ、スタンド、デラックスソフトケース	

### 替刃・シェーパークリーナーを用意しています。

- 刃は消耗品です。長い間ご使用になりますと切れ味が悪くなったり、外刃が摩耗などで破損することがありますので、早めに別売りの替刃と交換してください。

交換の目安は、1日1回3分間のご使用で

- 外刃…約1年
- 内刃…約3年

- 日立の家電品取扱店でお買い求めください。

- 替刃K-TX2S(外刃) 標準価格 3,000円(税別)
- 替刃K-TX2U(内刃) 標準価格 3,500円(税別)
- シェーパークリーナー(SC-51) 標準価格 500円(税別)

(価格には消費税は含まれておりません。平成9年2月現在の価格です。)

## ニカド電池のリサイクルについて

**注意**


製品を廃棄するとき以外は分解しないでください。

■この製品には、ニカド電池を使用しております。  
ニカド電池はリサイクル可能な貴重な資源です。  
ご使用済み製品の廃棄に際しては、ニカド電池を取りはずしていただき、製品のお買い求めのお店、または、ニカド電池のリサイクル協力店へお持ちいただき、リサイクルへご協力をお願いいたします。




### ニカド電池の取りはずしかた


- 1 シェーバーが完全に動かなくなるまで、スイッチを「ON」にしてニカド電池を放電させる。
- 2 キャップ、外刃、内刃をはずす。
- 3 本体ケース（後側）のネジ2本を ⊕ドライバーではずす。

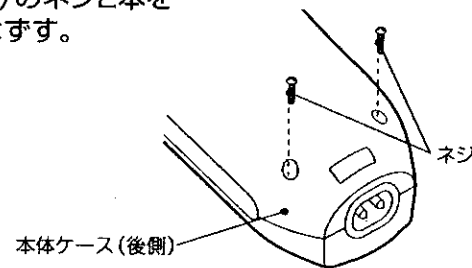

- 4 本体ケース（後側）を上方に持ち上げてはずす。

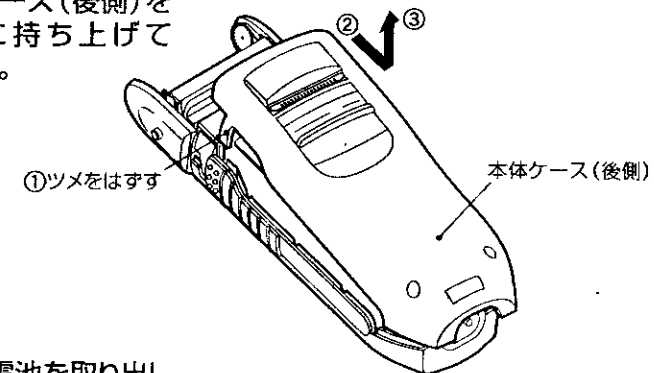

- 5 ニカド電池を取り出し、リード線を端子の近くで切る。

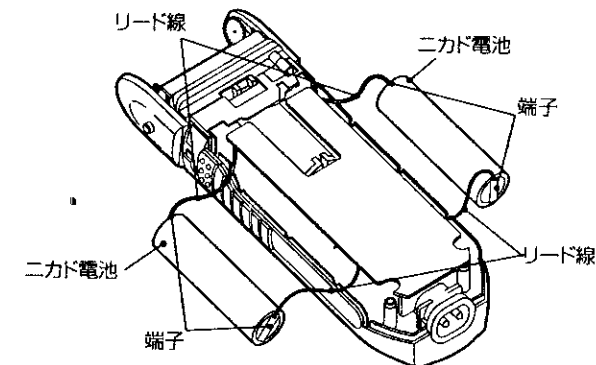

**注意**

取り出したニカド電池は⊕⊖の端子が接触しないようにしてください。(ショートの原因)

## 「故障かな?」と思ったときは

ご使用中に異常が生じたときは使用を中止し、修理を依頼される前に次の点検をしてください。

症状	点検するところ	直す方法
<ul style="list-style-type: none"> <li>切れ味が悪い。</li> <li>回転が弱い。</li> <li>使用回数が少ない。</li> </ul>	<ul style="list-style-type: none"> <li>刃の内側に毛くすが多量にたまっていませんか。</li> <li>刃面が油切れしていませんか。</li> <li>使用の都度、充電していませんか。</li> </ul>	<ul style="list-style-type: none"> <li>掃除とシェーバークリーナーの吹きつけを定期的に行ってください。</li> <li>P8のメモリー効果や不活性化を起こしたニカド電池を復帰させる方法に従い、充電してください。</li> </ul>
<ul style="list-style-type: none"> <li>スイッチを「ON」にしたとき、毛くすが飛び散る。</li> </ul>	<ul style="list-style-type: none"> <li>内刃に毛くすがたまっていませんか。</li> </ul>	<ul style="list-style-type: none"> <li>内刃を掃除してください。</li> </ul>
<ul style="list-style-type: none"> <li>充電ができない。</li> </ul>	<ul style="list-style-type: none"> <li>スイッチが「ON」になっていませんか。</li> </ul>	<ul style="list-style-type: none"> <li>スイッチを「OFF」にして充電してください。</li> </ul>
<ul style="list-style-type: none"> <li>充電切れで電源コードを接続しても動かない。</li> </ul>	<ul style="list-style-type: none"> <li>スイッチを「ON」にしたまま電源コードを接続していませんか。</li> </ul>	<ul style="list-style-type: none"> <li>スイッチを「OFF」にして、約1分待ってからご使用ください。</li> </ul>
<ul style="list-style-type: none"> <li>内刃が回転しない。</li> </ul>	<ul style="list-style-type: none"> <li>外刃の前後が逆になっていませんか。</li> </ul>	<ul style="list-style-type: none"> <li>外刃の前後の向きを正しく取り付けてください。</li> </ul>
<ul style="list-style-type: none"> <li>残量表示ランプの消灯が早い。</li> </ul>	<ul style="list-style-type: none"> <li>未使用期間が3ヶ月以上ありませんでしたか。</li> <li>シェーバーが動かなくなってもスイッチを「ON」にしていませんか。</li> </ul>	<ul style="list-style-type: none"> <li>P8のメモリー効果や不活性化を起こしたニカド電池を復帰させる方法に従い、充電してください。</li> </ul>

以上のことをお調べになり、それでも具合の悪いときは、ご自分で修理なさらないで、お買い上げの販売店にご相談ください。

## 保証とアフターサービス (必ずお読みください。) つづく

この商品の保証とアフターサービスについては、日本国内においてのみ適用します。

### 保証書(一体)

- この商品は保証書付きです。
- 保証書は、必ず「お買い上げ日」・「販売店名」などの記入をお確かめの上、販売店から受け取っていただき、内容をよくお読みの後、大切に保存してください。

保証期間

お買い上げ日から1年間

修理を依頼されるときは

持込修理

19ページに従って調べていただき、なお異常のあるときは、使用を中止し、必ず電源プラグを抜いてから、お買い上げの販売店にご相談ください。

- 保証期間中は  
修理に際しましては、保証書をご提示ください。  
保証書の規定に従って、販売店が修理させていただきます。
- 保証期間が過ぎているときは  
修理すれば使用できる場合には、ご希望により有料で修理させていただきます。


## 保証とアフターサービス

### 補修用性能部品の最低保有期間

- シェーバーの補修用性能部品の最低保有期間は、製造打切後6年です。この期間は通商産業省の指導によるものです。
- 補修用性能部品とは、その製品の機能を維持するために必要な部品です。

### ご不明な点や修理に関するご相談は

- 修理に関するご相談並びにご不明な点は、お買い上げの販売店または別紙の「日立家電品ご相談窓口一覧表」の窓口にお問い合わせください。

愛情点検	長年ご使用のシェーバーの点検を!	
	<b>こんな症状はありませんか</b> <ul style="list-style-type: none"> <li>●電源コードや電源プラグが異常に熱くなる。</li> <li>●本体が変形していたり、こげくさい臭いがする。</li> <li>●その他の異常・故障がある。</li> </ul>	<b>お願い</b> <p>故障や事故防止のため、スイッチを「OFF」にし、電源プラグをコンセントから抜いて、必ず販売店にご相談ください。</p>

株式会社 日立製作所  
〒105 東京都港区西新橋2-15-12  
電話(03)3502-2111



九州日立マクセル株式会社  
〒822-12 福岡県田川郡方城町大字伊方4680  
電話(0947)22-0585



The warranty for this product is valid, and after-sales service is available, only in Japan.

### Safety Precautions (P.1~3)

- Read these instructions thoroughly before using your shaver.
- The cautionary items shown herein are to allow you to use this product safely, and to prevent not only personal injury to you yourself or any other person, but property damage as well.
- The terms WARNING and CAUTION are used as defined below to indicate important information regarding safety. Always follow the rules so indicated.

	<b>WARNING</b> Failure to observe the indicated warning could result in serious personal injury or death.
	<b>CAUTION</b> Failure to observe the indicated caution could result in personal injury or property damage.

#### <SYMBOLS>

- △ The △ symbol is used to indicate warnings and cautions. The picture inside the triangle shows the general nature of the danger.  
A (△) indicates WARNINGS and CAUTIONS.
- ⊘ The ⊘ symbol is used to indicate prohibited actions. The picture inside the circle shows the general nature of the action prohibited.  
A (⊘) means DO NOT OPEN. A (⊘) means DO NOT USE IN OR NEAR WATER.
- ① The ① symbol is used to indicate required actions. The picture inside the circle shows the general nature of the action required.  
A (①) indicates a general action. A (ⓧ) means remove the plug from the outlet.

#### △WARNING

- ⊘ Use only areas that have electrical power supplies of 100 - 240 V.  
(Failure to do so may result in electrical shock or fire.)  
Do not use a worn or damaged electrical cord or outlet plug. Do not use an electrical outlet into which the outlet plug does not fit snugly.  
(Failure to do so may result in electrical shock, shorts or fire.)  
Do not damage, modify, tie knots in, pull, place heavy items on top of the electrical cord, nor insert it into other objects.  
(Failure to do so may result in electrical shock or fire.)
- ⓧ Do not immerse in water nor otherwise allow to become wet. Do not use while in the bath.  
(Failure to do so may result in electrical shock or shorts.)
- ⓧ Do not remove the outlet plug from the outlet when your hands are wet. When servicing the shaver, first remove the outlet plug and turn the switch to OFF.  
(Failure to do so may result in electrical shock or injury.)
- ① Do not make modifications to the shaver. The shaver should not be disassembled nor serviced by anyone other than a qualified service technician.  
(Failure to do so may result in electrical shock, fire or injury.)

#### △CAUTION

- ① Check for wear and damage to the blades before using.  
(Failure to do so may result in injury to the skin.)

- ⊘ Do not apply undue pressure to the blades.  
(Failure to do so may result in damage to the blades or injury to the fingers.)
- Do not touch the inner blade with your bare hands.  
(Failure to do so may result in injury to your finger.)
- Do not allow pins or other trash to become attached to the unit plug.  
(Failure to do so may result in electrical shock, shorts or fire.)
- When removing the outlet plug or the unit plug, do not pull the electrical cord. Always hold the plug itself when removing it.  
(Failure to do so may result in electrical shock, shorts or fire.)
- When not in use, remove the outlet plug from the outlet.  
(Failure to do so may result in injury or electrical shock, shorts or fire due to weakened insulation.)

#### Part Names And Their Functions (P.4~5)

- ① Cap: Always attach this cap, which protects the blades.
- ② Outer blade: Does not separate from the outer head holder.
- ③ Inner blade: Does not separate from the inner blade holder.
- ④ Safety switch: Remove the outer blade and the inner blade does not operate.
- ⑤ Switch: Slide this switch while holding the lock button down.
- ⑥ Lock button: Pushing this button releases the switch lock. ⑦ Battery: Nickel-cadmium battery
- ⑧ AC operation lamp: Lights when your shaver is used with AC.
- ⑨ Cord socket: For connecting the electrical cord.
- ⑩ Outer blade detachment button
- ⑪ Pivoting head lock: Slide this knob up to lock the pivoting head.
- ⑫ Charging finish lamp: Lights while charging goes out after charging is completed.
- ⑬ Remaining charge lamp: When using the product as a rechargeable type, the remaining battery charge lamp display is divided into 3 stages. Recharging is recommended only when the [EMP] lamp lights. Recharge soon after the lamp lights.
- ⑭ Center trimmer ⑮ Vertical slots ⑯ Beard comb ⑰ Trimmer blade: Use this blade to trim sideburns.
- ⑱ Trimmer button: Slide this button up to open the trimmer blade. ⑲ Unit plug ⑳ Electrical cord
- ㉑ Outlet plug ㉒ Cleaning brush ㉓ Stand ㉔ Soft case ㉕ Deluxe soft case

#### Charging The Batteries (P.6~8)

- Please charge the batteries before using them.
  - Always recharge the batteries using a 100 to 240 V alternating current electrical power source.
  - Charging the batteries takes approximately 1 hour.
  - Used once a day for three minutes at a time, a single charging should provide approximately ten days of shaving.
1. Turn the switch OFF, and connect the electrical cord.
  2. After charging the batteries, disconnect the electrical cord.
- To operate the shaver from an electrical outlet, connect the electrical cord and turn the switch ON.
- Even if you normally operate the shaver from an electrical outlet, recharge the batteries about once every two weeks.

#### How To Operate The Shaver (P.9~10)

- ⓘ Check for wear and damage to the blades before using.  
(Failure to do so may result in injury to the skin.)

#### Shaving (P.9)

1. Turn the switch ON.
2. Shave against the lie of your beard with the trimmer blade side facing up.  
For the best possible shave: (1) Stretch your skin with your fingers to loosen your beard.  
(2) Keep the shaver head perpendicular to your face.  
(3) Shave lightly against the lie of your beard.

- When shaving under your nose, push the pivoting head lock knob to lock the shaving head in

- ⊘ Do not apply undue pressure to the blades.  
(Failure to do so may result in damage to the blades or injury to the fingers.)
- Do not shave against the lie of your beard when the trimmer blade side facing down. Doing so may result in injury to your skin.

#### Trimming (P.10)

1. Turn the switch ON, and open the trimmer blade.
2. Keeping the trimmer blade perpendicular to your skin, shave lightly in the direction of the arrow.
3. After shaving, turn the switch OFF, and close the trimmer blade.

#### Cleaning And Maintenance (P.11~13)

- For comfortable, clean shaving:
  - Clean your shaver once every 2 or 3 days. When whiskers accumulate, your shaver won't shave well.
  - Turn the shaver ON, and remove whiskers from the surface of the outer blade.
  - Remove dirt from the unit using a cloth moistened with detergent.

#### CAUTION

- Do not use alcohol, benzene or thinner to clean the unit.  
(Failure to do so may result in distortion or discoloration of the unit.)
- ⚠ When servicing the shaver, first remove the outlet plug and turn the switch to OFF.  
(Failure to do so may result in electrical shock or injury.)
- ⊘ Do not touch the inner blade with your bare hands.  
(Failure to do so may result in injury to your finger.)
- ⊘ Do not apply undue pressure to the outer blade holder.  
(Failure to do so may result in damage to the blades or injury to the fingers.)

1. Remove the outer blade.
2. Clean the outer blade, inner blade and trimmer blade, as well as the unit body.
  - Press the cleaning brush against the inner blade as shown in the diagram and slide lengthwise across the blade in the direction shown by the arrow. The blade will rotate, and whiskers will come free. Repeat several times.

### Replacing The Outer And Inner Blades (P.14~15)

#### Replacing The Outer Blade (P.14)

- 1.Remove the outer blade.
- 2.Attach the new outer blade.

#### Replacing The Inner Blade (P.15)

- 1.Remove the inner blade.
- 2.Attach the new inner blade.

●Align the (▼) marks on the inner blade and unit body.

### Recycling the nickel-cadmium battery (P.17~18)

●Do not disassemble the product except when discarding.

■This product utilizes a nickel-cadmium battery. Nickel-cadmium batteries are a recyclable and valuable resource. When discarding this product, remove the nickel-cadmium battery by following the removal instructions and take it to the store from which it was purchased, or to a nickel-cadmium recycling center; your cooperation in recycling is humbly requested. recycle nickel-cadmium batteries

#### How to remove nickel-cadmium battery (P.17~18)

- 1.Turn the switch to [ON] until the shaver completely stops moving to discharge the electricity from the nickel-cadmium battery.
- 2.Remove the cap, outer blades and inner blades.
- 3.Remove the two screws from the body case (bottom side) with a cross head screwdriver.
- 4.Pull off the body case (bottom side).
- 5.Remove the nickel-cadmium battery, cut the lead wire near the terminal.

Be careful so that the negative and positive terminals of the removed battery do not come in contact and short-circuit.

- 1.保証期間内でも次のような場合には有料修理となります。
  - (イ) 使用上の誤り、または改造や不当な修理による故障または損傷。
  - (ロ) お買い上げ後の落下、輸送などによる故障または損傷。
  - (ハ) 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障または損傷。
  - (ニ) 車両、船舶にとう載して使用された場合に生じた故障または損傷。
  - (ホ) 業務用で使用されて生じた故障または損傷。
  - (ヘ) 本書のご提示がない場合。
  - (ト) 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合あるいは字句を書き換えられた場合。

- 2.この商品について出張修理をご希望の場合には、出張に要する実費を申し受けます。
- 3.ご転居の場合は事前にお買い上げの販売店にご相談ください。
- 4.贈答品などで本書に記入してあるお買い上げの販売店に修理をご依頼にできない場合には、日立家電品ご相談窓口にご相談ください。
- 5.本書は再発行いたしませんので紛失しないよう大切に保存してください。

- この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。したがってこの保証書によってお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明の場合は、お買い上げの販売店または日立家電品ご相談窓口にお問い合わせください。
- 保証期間経過後の修理、補修用性能部品の保有期間について詳しくは、取扱説明書をご覧ください。
- 本書は日本国内においてのみ有効です。 Effective only in Japan.

修理メモ